

Introduction	
instructional videos.....	3
Intrusion sensor.....	16
ISOFIX and i-Size anchor points.....	36

J

Jump starting	
connecting a starting aid.....	212
connecting jump leads.....	210

K

Keyless entry.....	8
Keyless locking.....	14

L

Label locations.....	245
Lamps.....	56
auto lamps wiper detection.....	58
bulb changing.....	187
bulb specification.....	254
condensation.....	58
rear lamp removal.....	194
test.....	51
TPMS warning lamp.....	54
warning lamps.....	51
xenon headlamps.....	188
Lane departure warning.....	141
Lane departure warning lamp (green).....	54
Lane departure warning lamp (red).....	52
Leather cleaning.....	201
Levelling	
headlamps.....	58
License	
navigation.....	170
Lighting	
ambient lighting.....	61
interior lamps intensity.....	61
interior lamps locations.....	60
stealth mode.....	61
Limp home mode.....	106
Load securing.....	87
Locking	
automatic relocking.....	16

confirmation.....	14
door locks and release levers.....	13
double locking.....	13
drive away.....	9
emergency locking.....	17
global closing.....	14
in an emergency.....	17
keyless.....	14
mislock.....	14
security sensor fault.....	16
single.....	13
with the emergency key.....	17
Locking wheel nuts.....	239
Low fuel warning lamp.....	53
Low oil pressure warning lamp.....	51
Lubricants specifications.....	248
Luggage compartment	
anchor points.....	87

M

Maintenance	
arduous driving conditions.....	185
brake fluid level.....	207
bulb changing.....	187
rear lamp removal.....	194
bulb specification.....	254
capacities.....	253
changing a fuse.....	215
checking tyre pressure after a repair.....	233
cleaning	
alloy wheels.....	200
exterior.....	200
glass.....	200
interior.....	201–202
leather.....	201
rear screen.....	201
sensors and cameras.....	200
the engine compartment.....	200
closing the bonnet.....	186
clutch fluid level.....	207
daily checks.....	184
diesel particulate filter (DPF).....	184
engine compartment fuse box.....	215
engine coolant level.....	206