

Tyre pressure monitoring system (TPMS)

TYRE PRESSURE MONITORING SYSTEM (TPMS)



TPMS provides a low pressure warning and does not re-inflate your tyres. Tyre pressures should be checked regularly, using an accurate pressure gauge when the tyres are cold.



TPMS can NOT register damage to a tyre. Regularly check the condition of your tyres.




When inflating tyres, care should be taken to avoid bending or damaging the TPMS valves. Always make sure that the inflation head to the valve stem is correctly aligned.

Note: Non-approved accessories may interfere with the system. If this occurs, **TYRE PRESSURE MONITORING FAULT** is displayed in the Message centre.

Note: Different types of tyre may affect TPMS performance. Always replace tyres in accordance with recommendations.

TPMS constantly monitors the tyre pressure in each wheel. Temporary-use spare tyres (when fitted) are not monitored.

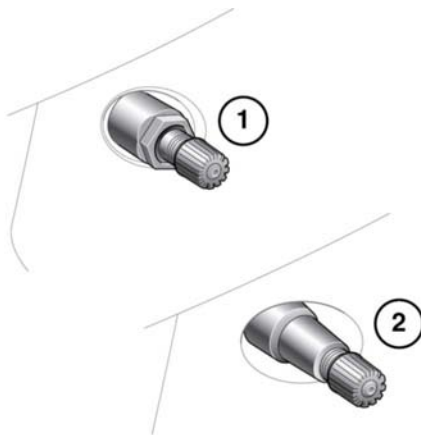

E132513

Wheels fitted with a TPMS can be visually identified by the external metal lock nut and valve (1). All Jaguar non-TPMS wheels have a rubber valve fitted (2).

Tyre pressures should be checked regularly when the tyres are cold, and adjusted as necessary. The presence of a TPMS does not remove the need to do this.

The tyre pressure warning lamp illuminates when one or more of the tyres are significantly under-inflated. See **54, TYRE PRESSURE MONITORING SYSTEM (YELLOW)**. Stop and check the tyres as soon as possible, and inflate them to the recommended pressure for the vehicle's loading condition.

TYRE PRESSURE CHECK

The Instrument panel can be used to display the vehicle's tyre pressures. The tyre pressure figures can be accessed via **Vehicle Information** menu.

For more information, see **47, INSTRUMENT PANEL MENU**.

Note: The tyre pressure units can be configured to display as either bar, psi, or kPa via the **Vehicle Information** and the **Tyre Information** menus.

When selected, the last known tyre pressures will be displayed, alongside the recommended cold tyre pressures (in brackets).

Note: If any of the wheels or tyres have been removed, the displayed tyre pressures may not be valid. Drive the vehicle for at least 15 minutes in order to re-calibrate the system.