

- The fuse box is accessed by removing the right-side luggage compartment access panel. Turn the retaining lug 90 degrees counter-clockwise to release and remove the access panel.

**Note:** This fuse box also contains spare fuses and the vehicle's fuse removal tool.

## 5. Luggage compartment upper fuse box:

- The fuse box is accessed by removing the right-side luggage compartment access panel. Turn the retaining lug 90 degrees counter-clockwise to release and remove the access panel.

## CHANGING A FUSE



Always switch off the ignition system and the affected electrical circuit, before replacing a fuse.



Only fit Jaguar approved replacement fuses of the same rating and type, or fuses of a matching specification.



If the replacement fuse blows after installation, the system should be checked by a Dealer/Authorised Repairer.

**Note:** Jaguar recommend that only qualified personnel should remove or replace relays.

The vehicle's fuse removal tool and some spare fuses, are located in the luggage compartment lower fuse box.

## ENGINE COMPARTMENT FUSE BOX

### Engine compartment front fuse box

Fuse No	Rating (Amps)	Fuse Colour	Circuit
1	5	Tan	Left-side headlamp motor
2	5	Tan	Headlamp control module
3	5	Tan	Right-side headlamp motor
4	-	-	-
5	-	-	-
6	30	Green	Headlamp power wash
7	-	-	-
8	-	-	-
9	-	-	-
10	15	Blue	Intercooler water pump

## Engine compartment rear fuse box

Fuse No	Rating (Amps)	Fuse Colour	Circuit	Not applicable to:
11	15	Blue	Exhaust Gas Recirculation (EGR) valve. Engine management (MAF/IAT sensor). Front heated oxygen sensor (H02S).	2.0L petrol.
12	15	Blue	Variable Valve Timing (VVT). Fuel volume control valve. Active vanes motor.	2.0L petrol.
13	10	Red	Neutral position sensor. Fan cooling box. Pump leak detection. Temperature sensor. Fuel type sensor. Engine management (MAF/IAT sensor). Fuel leak detection.	-
14	15	Blue	Compressor Shut Off Valve (CSOV). Compressor Recirculation Valve (CRV). Exhaust Gas Recirculation Cooler Bypass Valve (EGRCBV). Variable Valve Timing (VVT).	3.0L petrol. 2.0L petrol.
	10	Red	Compressor Shut Off Valve (CSOV). Compressor Recirculation Valve (CRV). Exhaust Gas Recirculation Cooler Bypass Valve (EGRCBV). Turbo Shut Off Valve (TSOV).	3.0L petrol. Diesel.
15	10	Red	Cooling fan control unit. Fan cooling-E box. Water in diesel sensor. Active engine mounting solenoid. Motor cooling fan. Purge control valve.	-
16	25	Clear	Engine control module. Capacitor. Ignition coil.	Diesel.
17	20	Yellow	Exhaust sensors.	-
18	20	Yellow	Exhaust sensors.	2.0L petrol.
19	20	Yellow	Exhaust sensors.	2.0L petrol. Diesel.
20	-	-	-	-
21	-	-	-	-
22	5	Tan	Intercooler water pump.	2.0L petrol.
23	5	Tan	Engine control module. Starter monitor. Voltage Quality Module (VQM).	-

Fuse No	Rating (Amps)	Fuse Colour	Circuit	Not applicable to:
24	15	Blue	Electronic Transmission Switch (ETS). Transmission Control Module (TCM).	Manual transmission.
25	30	Green	Starter Motor.	Vehicles without Intelligent stop/start.
26	-	-	-	-
27	25	Clear	Transfer Case Control Module (TCCM).	-
28	-	-	-	-