

## AIR QUALITY SENSOR

The sensitivity of the Air quality sensor can be adjusted using the Touch screen:

1. Select **Settings** from the **Climate** menu.
2. Touch the buttons on the screen to increase/decrease sensitivity.  
To switch off air quality sensing, touch **Off**.



The auto recirculation icon appears on the Touch screen when the Air quality sensor is switched on.

## HEATED SEATS

**Note:** *Seat heaters consume a large amount of battery power. They will only operate when the engine is running.*

**Note:** *If fitted, the rear Heated seats (non-climate) can only be operated by pressing the buttons located at the rear of the centre console.*

Press the relevant rear Heated seat button, to switch the required seat heater on at the maximum setting. The 3 LED indicators on the button will illuminate.

Press a second time to set the Heated seat at the medium setting; 2 LED indicators will illuminate.

Press a third time to set the Heated seat at the lowest setting; 1 LED indicator will illuminate.

Press a fourth time to switch off.

## CLIMATE SEATS

**Note:** *The Heated/Climate seats will only operate when the engine is running.*

Touch the **Front seats** soft key from the **Climate** menu, or press the Heated/Climate seat button.

**Note:** *The **Front seats** menu will be displayed.*

**Note:** *A seat icon, at the top of the Touch screen, will change colour to indicate the status of the Climate seats; red for heated operation and blue for cooled operation.*

### Heated ventilation

- Touch the up arrow icon to switch heated ventilation on at the maximum setting (3 red bars).
- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the down arrow a third time to switch off heated seat ventilation.

### Cooled ventilation

- Touch the down arrow icon to switch cooled ventilation on at the maximum setting (3 blue bars).
- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow a third time to switch off cooled seat ventilation.

### Seat zone selection

If fitted with Climate seats, constant selection of the **Seat zone** soft key will scroll through the 3 choices of seat zone; **full seat**, **cushion**, or **back rest** only.

## AUXILIARY HEATER

The vehicle may be fitted with an Auxiliary heater, which is powered by fuel drawn from the vehicle's tank. The Auxiliary heater operates at low ambient temperatures and helps to boost the temperature of the engine's coolant for improved heater performance. It can also be controlled by the Timed climate control system or from the Timed climate remote control (if fitted).