
## **HEADLAMP BULB REPLACEMENT -**HALOGEN LOW BEAM

See 187, CHANGING A BULB.





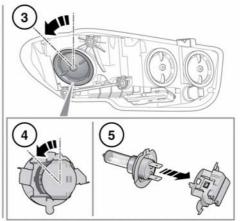

## To prevent the vehicle from moving and causing personal injury, make sure that the Electric parking brake is applied.

- 1. To allow for greater access, start the engine and turn the steering onto the relevant full lock. Switch off the ignition.
- 2. Rotate the vehicle cover, approximately 45 degrees counter-clockwise to release and then pull to remove.
- **3.** Rotate the headlamp cover, approximately 45 degrees counter-clockwise to release and then pull to remove.

**Note:** Note the orientation of the cover to aid refitting.

**4.** Rotate the bulb holder, approximately 45 degrees counter-clockwise to release and then pull to remove.

**Note:** Note the orientation of the bulb holder to aid refitting.

5. Pull the bulb to remove it from the bulb holder.

**Note:** Note the orientation of the bulb to aid refitting.

Reverse the removal procedure to install a new bulb.

①


Make sure to straighten the steering system before driving the vehicle.

## FRONT DIRECTION INDICATOR BULB REPLACEMENT

(1)

See 187, CHANGING A BULB.

## Halogen headlamp direction indicator bulb

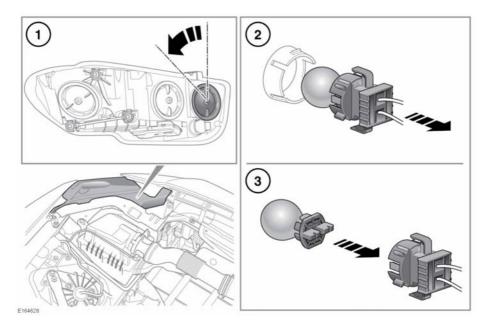

 Rotate the headlamp cover, approximately 45 degrees counter-clockwise to release and remove.

**Note:** Note the orientation of the cover to aid refitting.

2. Pull the bulb holder to remove it from the headlamp.

**Note:** Note the orientation of the bulb holder to aid refitting.

**3.** Pull the bulb to remove it from the bulb holder.

**Note:** Note the orientation of the bulb to aid refitting.

Reverse the removal procedure to install a new bulb.