

## INSTRUCTIONAL VIDEO



E173295

## PORTABLE MEDIA CONNECTIONS

Portable media devices can be connected to the media hub, located in the cubby box. See **85, STORAGE COMPARTMENTS**. Compatible portable devices include:

- USB mass storage devices (e.g., a memory stick). Devices must use FAT or FAT32 file format.
- iPod (iPod Classic, iPod Touch, iPhone, and iPod Nano are supported - full functionality for older devices cannot be guaranteed). iPod Shuffle functionality cannot be guaranteed.
- Auxiliary device (personal audio, MP3 players, all iPods).

**Note:** Media playing devices, connected via the **AUX** socket, will not have Touch screen control.

If you are connecting an iPod, mass storage, or **Bluetooth**® wireless technology device, use the Touch screen to operate and search for the device.

- ⚠ Please disconnect your iPod when leaving the vehicle. Failure to do so may result in the iPod battery discharging.

**Note:** The Audio system will play MP3, WMA, and AAC files.

To maximise playback quality, it is recommended that lossless compression is used for any media files on USB or iPod. Failing this, it is recommended that compressed files utilise a minimum bitrate of 192 kb/s (a higher bitrate is strongly recommended).

**Note:** iPod is a trademark of Apple Computer Inc., registered in the US and other countries.


**Note:** Some MP3 players have their own file system that is not supported by this system. To use your MP3 player, you must set it to **USB Removable Device** or **Mass Storage Device** mode. Only music that has been added to the device in this mode can be played.

For a list of compatible **Bluetooth**® wireless technology devices, please refer to the Jaguar website at: [www.jaguar.com](http://www.jaguar.com).

The **Bluetooth**® wireless technology devices listed have been tested for compatibility with Jaguar vehicles. Performance will vary, based on the device's software version and the battery's condition. Devices are warranted by their manufacturer, not Jaguar Land Rover Limited.

## CONNECTING A MEDIA DEVICE

- ⚠ Read the manufacturer's instructions for any device, before it is connected to the Audio system. Make sure the device is suitable and complies with any instructions regarding connection and operation. Failure to do so may result in damage to the vehicle's Audio system or the auxiliary device.

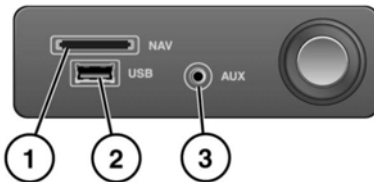

E168153

Portable media devices can be connected to the media hub, located in the cubby box. See **85, STORAGE COMPARTMENTS**.

1. SD card slot for Navigation and Voice only.

**Note:** The Media system will not play music or display saved images from an SD card.

2. USB socket.
3. 3.5 mm AUX socket.



Do not connect non-media playing devices into the USB port.

**Note:** Use the cable supplied with your media device to connect to the USB socket.

**Note:** A USB hub cannot be used to connect more than one USB device to the Audio unit.

**Note:** Devices connected to the USB ports will be charged, but devices that are fully discharged will not play.

**Note:** In some cases, if an iPhone is connected via a USB cable for music and also to a **Bluetooth®** wireless technology device for other phone functions, the audio will stream through only the last connected port. For example, if a **Bluetooth®** wireless technology device is the last connection made to the iPhone and the iPod lead is connected, no audio will be heard through the speakers via the iPod lead. Track title and time information will still be shown on the display. Audio output from the speakers will only be obtained if the user chooses **audio mode** on the **Bluetooth®** wireless technology device. To address this issue, disconnect and reconnect your device's USB cable or open the iPod application on the iPhone, select the **Bluetooth** icon and select **Dock Connector** on the pop-up.

When an iPod is connected, playback will continue from the point at which it was last playing, provided the iPod battery is in a good state of charge.

**Note:** Options, such as **Repeat** and **Mix**, relate to the device currently playing; they will not apply to any subsequent device.

The 3.5 mm AUX socket allows extra equipment (e.g., personal stereos MP3 player, hand-held navigation unit, etc.) to be connected to the Audio system.

**Note:** iPod shuffle may be connected via the AUX socket.