

# Entering the vehicle

**Note:** In some markets, a second press of the button will switch on the headlamps and reversing lamps. A third press will be required to switch the lamps off.

6. Emergency key access: Slide open the side cover to release, then remove.
7. Remove the emergency key blade and unfold.
8. If the Smart key fails to open the vehicle, insert the key blade into the slot at the base of the driver's door lock cover. The door lock cover is marked with a key symbol. To release the cover, gently lever the key blade upwards. Carefully twist the key blade, to lever the cover off of the retaining clips. Insert the key blade into the exposed lock and turn to operate the lock. The alarm will sound. To disarm the alarm, see **101, KEYLESS START BACKUP**.

**Note:** When replacing the door lock cover, locate the top two retaining lugs before pushing the cover down and inwards to locate the single bottom lug. The lug will click into the locked position. Check the security of the cover. An insecure cover is likely to fall off while the vehicle is moving.

**Note:** When the driver's door is unlocked using the key blade, the alarm will sound until the Smart key is positioned correctly.

**Note:** A replacement Smart key can be obtained only from a Dealer/Authorised Repairer. The Dealer/Authorised Repairer will require proof of identification and ownership.

Notify a Dealer/Authorised Repairer immediately if a Smart key is lost or stolen.

9. Keyless entry/exit:
  - Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

## SINGLE/MULTI-POINT ENTRY

The Smart key unlock button will unlock the vehicle in one of two ways:

1. Single-point entry: Unlocks the driver's door and the fuel filler flap only. A second press is required to unlock the remaining doors and the luggage compartment.
2. Multi-point entry: Unlocks all of the doors, the fuel filler flap and the luggage compartment, on the first press.

To change from Single to Multi-point entry (or vice versa), press both the lock and unlock buttons simultaneously for 3 seconds. The hazard warning lamps will flash twice to confirm the change.

This **2-Stage Unlocking** feature can be enabled/disabled via the **Vehicle Set-up** menu. See **47, INSTRUMENT PANEL MENU**.

## KEYLESS ENTRY



The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including in a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Keyless entry or when starting the vehicle.

**Note:** Make sure that the Smart key is within 1.0 m (3 feet) of the vehicle.

The Smart key needs only to be on the driver's person, it does not need to be exposed or handled.

The keyless unlocking sensor is located on the inner surface of the door handle. Grip and pull the door handle to open the door, then the vehicle will unlock and the alarm system will also be disarmed.