

fuel tank capacity.....	180
label locations.....	245
lubricants.....	248
methanol.....	175
MTBE.....	175
weight.....	249
Speed-dependent wipers.....	63
Speed limiting.....	126
Speedometer.....	46
SRS.....	40
airbag warning lamp.....	53
Stability control	
DSC.....	108
switching between DSC and tracDSC.....	108
switching on.....	109
switching off.....	108
tracDSC.....	108
Starting after a collision.....	243
Starting the engine.....	100
keyless start backup.....	101
Stealth mode.....	61
Steering column	
lock.....	9
vehicle recovery.....	9
Steering wheel	
adjusting.....	27
AUTO position.....	28
heated.....	28
Steering wheel controls	
speed limiter.....	126
telephone.....	158
Stolen vehicle	
InControl secure.....	161
Stop/start	
activating.....	102
deactivating.....	102–103
Storage compartments.....	85
cup holders.....	85
front cubby box.....	85
rear armrest.....	85
Storage compartments areas	
glove box.....	85
Sun blind.....	73

Sunroof	
anti-trap protection.....	75
reset.....	198
Supplementary restraint system (SRS)	
airbag deployment.....	43
airbag locations.....	40
airbags maintenance.....	183
airbag warning lamp.....	44, 53
curtain airbags.....	44
disabling passenger airbag.....	42
front airbags.....	43
side airbags.....	44
Surround cameras.....	124
touch screen menu.....	124
Suspension	
adaptive dynamics.....	110
Switching off the engine.....	100
Switching on the ignition.....	100

T

Tachometer.....	46
Technical specifications	
brake fluid.....	248
capacities.....	253
dimensions.....	251
engine.....	247
engine coolant.....	248
engine oil.....	248
radio frequency regulations.....	256
washer fluid.....	248
weights.....	249
Telephone.....	157
Bluetooth wireless technology.....	155
call volume.....	158
deleting the connected phone or device.....	156
overview.....	157
safety.....	158
steering wheel controls.....	158
Telephone compatibility.....	155
Telephone connecting.....	155
Telephone pairing.....	155
Terms and conditions	
navigation.....	170
Tilt sensor.....	16

Timed climate.....	82	hitch guidance.....	89
additional remote controls.....	84	powered tow ball.....	92
programming.....	82	stability assist.....	89
remote control batteries.....	84	tow assist.....	90
using the remote control.....	83	tow ball accessories.....	95
Tinted front screen.....	75	tow ball options.....	89
Toll road payment.....	75	tow bar dimensions.....	96
Touch screen.....	202	tow bar mounting points.....	96
automatic recirculation.....	80	trailer electrical connections.....	93
button feedback.....	77	trailer reversing aid.....	90
clock.....	77	trailer sway.....	89
eco data.....	135	weights.....	88
extra features.....	78	Towing points.....	241
front climate control.....	79	tracDSC	
fuel burning heater.....	81	stability control.....	108
fuel economy facts.....	135	Tracking your vehicle	
general settings.....	77	InControl secure.....	161
heated and cooled seats.....	81	Traction control	
heated seats.....	81	switching between DSC and tracDSC.....	108
language selection.....	77	switching off.....	108
operating.....	77	switching on.....	109
shortcuts.....	77	tracDSC.....	108
surround cameras.....	124	Traffic sign recognition.....	140
system settings.....	77	Trailer	
touch screen care.....	77	electrical connections.....	93
valet mode.....	78	sway.....	89
volume presets.....	77	towing weights.....	88
Tow ball		Trailer direction indicators warning lamp.....	55
detachable.....	91–92	Trailer tow assist.....	90
options.....	89	Training	
powered tow ball.....	92	videos.....	9, 56, 80, 136, 139, 148, 160, 177
Tow ball accessories.....	95	Transmission	
Tow bar		automatic.....	104
mounting points.....	96	gear shift warning lamp.....	54
Towing		limp home mode.....	106
a trailer.....	94	manual.....	106
calculating weight.....	94	Transmitters	
checks		smart key.....	255
breakaway cable.....	94	Transporting the vehicle.....	240
lights.....	94	Trip computer.....	48
nose weight limit.....	94	average speed.....	48
tow ball.....	94	fuel consumption.....	48
detachable tow ball.....	91–92	fuel range.....	49
essential checks.....	94	reset.....	48