

## WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged, or the power supply is interrupted.

Once the power supply is restored, reset the windows as follows:

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for 2 seconds.
3. Release the switch.
4. Repeat the lift and release procedure twice more.
5. Test the window for correct manual and automatic switch operation. See **73, ELECTRIC WINDOWS**.
6. Repeat the procedure on each window.

**Note:** *It is advisable to have the engine running while resetting the windows, to make sure that a minimum of 12 volts is available at all times.*