


## ELECTRIC WINDOWS

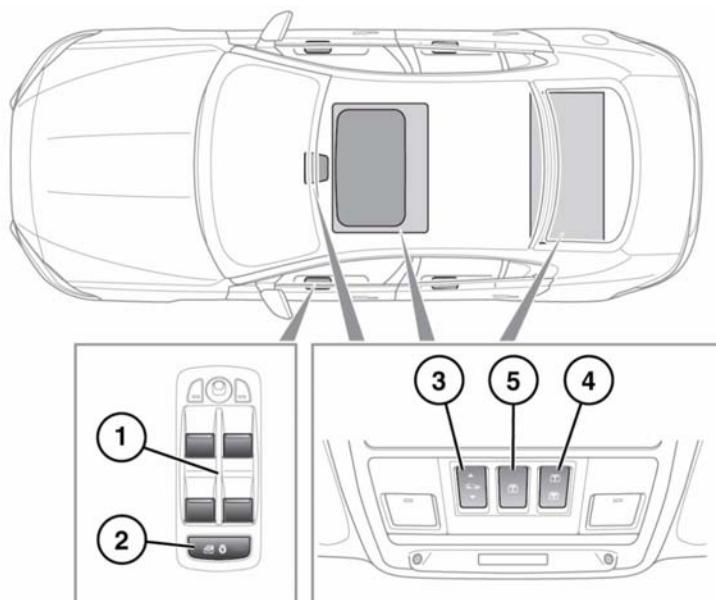

E166373

## 1. Window switches:

**Note:** Each switch has a 2-stage operation. Lightly press/pull and hold to manually operate to the required position. Alternatively, press/pull fully and release for fully (one-touch) automatic operation. Fully automatic operation can be halted at any time, by operating the switch again.

- Press the front of the switch to partially/fully open.
- Pull the front of the switch to partially/fully close.

**Note:** The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.



**Make sure that the Smart key is removed when leaving passengers in the vehicle. This will prevent unsupervised operation of the windows and sunroof, which may result in injury.**



Any ice must be removed from the windows before operating.

## 2. Rear window isolator.



**If children are carried in the rear seats, the isolator switch should be used to prevent operation of the rear windows.**

## 3. Sunroof: