# PROGRESS CONTROL SYSTEM (AMBER)



Illuminates to confirm that the Progress control system is enabled.

# TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that 1 or more tyres are significantly under-inflated.

Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

#### **HIGH BEAM (BLUE)**



Illuminates when the high beam headlamps are switched on or flashed.

#### LANE DEPARTURE WARNING (GREEN)



Illuminates green to indicate that the Lane departure warning system has recognised a lane marking. Illuminates grey to confirm the system is enabled, or if lane markings have not been recognised.

### **SIDE LAMPS (GREEN)**



Illuminates when the side lamps are switched on.

#### **AUTO HIGH BEAM (GREEN)**



Illuminates when the Auto high beam feature has switched on the vehicle's high beams.

### **DIRECTION INDICATORS (GREEN)**



The appropriate warning lamp will flash when the direction indicators are operated.

#### **INTELLIGENT STOP/START (GREEN)**



Illuminates when the engine is shut down by the Intelligent stop/start system.

**Note:** Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, will not illuminate during an engine shutdown by the Intelligent stop/start system.

## **GEAR SHIFT (GREEN)**



The gear shift indicator illuminates briefly at the recommended gear change point (up-shift).

The gear shift indicator will not illuminate when Cruise control is active and is not being overridden by pressing the accelerator pedal.

**Note:** This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

## **CRUISE CONTROL (GREEN)**



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.