

Warning lamps

PROGRESS CONTROL SYSTEM (AMBER)



Illuminates to confirm that the Progress control system is enabled.

TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that 1 or more tyres are significantly under-inflated.

Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

LANE DEPARTURE WARNING (GREEN)



Illuminates green to indicate that the Lane departure warning system has recognised a lane marking.

Illuminates grey to confirm the system is enabled, or if lane markings have not been recognised.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

AUTO HIGH BEAM (GREEN)



Illuminates when the Auto high beam feature has switched on the vehicle's high beams.

DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

Note: Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, will not illuminate during an engine shutdown by the Intelligent stop/start system.

GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (up-shift).

The gear shift indicator will not illuminate when Cruise control is active and is not being overridden by pressing the accelerator pedal.

Note: This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.