

All the interior lamps (except for the glovebox and the vanity mirror lamps) illuminate automatically when the vehicle is unlocked, or a door is opened. They will extinguish approximately 20 seconds after all of the doors are closed, or when the vehicle is locked.

To switch the automatic illumination of the interior lamps off/on, continue to touch the front interior lamp lens (6) until the lamp flashes.

INTERIOR LIGHTS OFF or **INTERIOR LIGHTS AUTO** will be displayed in the Message centre accordingly.

Note: *The puddle lamps (mounted at the base of each door) and the Luggage compartment lamps are automatically operated when a door or the luggage compartment is opened. The on/off status of the interior lamps' automatic illumination, will not affect the operation of these lamps.*

INTERIOR LIGHTS INTENSITY

Use the rotary control to adjust the intensity of the instrument illumination. The exterior lamps must be switched on while changes are being made. See **288, DRIVER CONTROLS**.

AMBIENT LIGHTING

The ambient lighting can be adjusted for colour and intensity via the Touch screen **Extra features** menu. See **76, TOUCH SCREEN CONTROLS**. The exterior lamps must be switched on while changes are being made.

STEALTH MODE

Stealth mode lowers the level of interior illumination to aid night time driving. Stealth mode can be enabled through the Touch screen **Extra features** menu. See **76, TOUCH SCREEN CONTROLS**.

Once enabled, Stealth mode is activated by switching the Touch screen off. If night time conditions exist when the Touch screen is switched off, the interior switch illumination and the Instrument panel illumination will automatically reduce to their minimum levels. Stealth mode will be deactivated if night time conditions no longer exist, or if the Touch screen is switched back on.

Note: *The interior illumination control will not operate while Stealth mode is active. See **288, DRIVER CONTROLS**.*