
- Press and hold the retaining lug at the base of the electrical connector and then pull to release it from the rear lamp.
- **5.** Completely remove the rear lamp from the vehicle.
- Make sure that the rear lamp is placed on a soft surface that will not damage or scratch the rear lamp lens.

Reverse the removal procedure to refit.

REAR LAMP BULB REPLACEMENT

See **187**, **Changing a Bulb**.

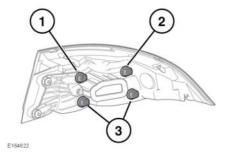


 
Remove the relevant rear lamp. See **194**, **REAR LAMP REMOVAL**.

The bulb locations are as follows:

- **1.** Reverse lamp.
- **2.** Direction indicator lamp.
- 3. Brake lamps.

Note: Always replace both brake lamp bulbs.

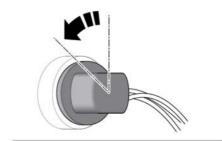



E164624

Identify the location/s of the bulb/s to be changed and then follow the procedure below:

 Rotate the bulb holder, approximately 45 degrees counter-clockwise, then pull to remove it from the rear lamp.

Note: Note the orientation of the bulb holder to aid refitting.

2. Pull the bulb to remove it from the bulb holder

Note: Note the orientation of the bulb to aid refitting.

Reverse the whole removal process to install a new bulb.

REAR DIRECTION INDICATOR AND REVERSING LAMP BULB REPLACEMENT

See 197, REAR LAMP BULB REPLACEMENT.

BRAKE LAMP BULB REPLACEMENT

See 197, REAR LAMP BULB REPLACEMENT.