

# Progress control system


**Note:** If the vehicle's brakes are firmly applied, during the operation of Progress control, the system will exit the full function mode and will then enter into the descent control mode.

**Note:** Light and gentle application of the brake pedal, during the operation of Progress control, will lower the target vehicle speed. When the brake pedal is fully released, the Progress control system will maintain the speed at which the brake pedal was released.

**Note:** The driver can override the Progress control system at any time, with the use of the brake pedal or the accelerator pedal.

**Note:** If the vehicle's speed exceeds 30 km/h (18.6 mph), the Progress control system will be suspended, and the system will then go into a standby mode, until the vehicle's speed is less than 30 km/h (18.6 mph).


**Note:** If the vehicle's speed exceeds 80 km/h (50 mph), the Progress control system will be disabled. If required, the system will have to be switched on again, via the Progress control button.

 The driver must maintain full control of the steering and brakes at all times.

When the Progress control system is enabled and the brake pedal is fully released, the system will help to provide controlled and progressive assistance for the vehicle to;

- Pull-away from stationary in a forward or reverse direction on level ground, and uphill or downhill.
- Perform low speed manoeuvring in a forward or reverse direction.
- Make progress and maintain a selected, low target (set) speed, from 3.6 km/h (2.2 mph) up to 30 km/h (18.6 mph).

In the event that the vehicle's brake temperatures exceed the normal operating limits, the warning **ASPC TEMPORARILY UNAVAILABLE** will be displayed in the Message centre. The Progress control system will then fade-out and become temporarily inactive. Once the brakes have returned to the normal operating temperatures, the message will extinguish and the Progress control system will resume normal operation, if still required.

 Do not attempt a steep descent if the Progress control system is not enabled or the warning message is displayed.

## PROGRESS CONTROL SYSTEM SETTINGS

When the Progress control system is enabled, the desired target (set) speed for the vehicle can be set and adjusted via the Cruise control buttons, mounted on the right side of the steering wheel. See **127, USING CRUISE CONTROL**.

- **SET+:** While the vehicle is moving, press to enable the Progress control system, to recognise that the desired target vehicle speed is to be set and adjusted. Press repeatedly (or press and hold) to increase the target speed, up to a maximum speed of 30 km/h (18.6 mph). Alternatively, while making progress, press the **SET+** button for the vehicle's current speed to be the set speed.

**Note:** If the vehicle is at a standstill, then press and hold the brake pedal while using the **SET+** button.

**Note:** Light and gentle application of the accelerator pedal will temporarily override the current set target speed. When the accelerator pedal is fully released, the Progress control system will revert back to the previously selected target speed.