

# Warning lamps

## BRAKE (YELLOW)



Illuminates with a message, to indicate worn brake components.

The message, **Brake Pads Worn**, may appear in the Message centre.

In the event that this message is displayed, drive carefully and seek qualified assistance at the earliest opportunity.

**Note:** If the lamp illuminates without a message, then a fault has been detected with the brake wear system. Drive carefully and seek qualified assistance at the earliest opportunity.

## PARKING BRAKE (RED)



Illuminates when the Electric Parking Brake (EPB) is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

## BATTERY CHARGE (RED)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on or illuminates while driving, there is a fault with the battery charging system and a message will be displayed in the Message centre. Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled.

The lamp will extinguish when the relevant seat belt is buckled.

**Note:** Objects on the front passenger seat may activate the Seat belt reminder feature. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See **29, USING THE SEAT BELTS**.

## LANE DEPARTURE WARNING (RED)



If the Lane departure warning system detects that the vehicle has crossed either of the lane markings that it is travelling within, without activation of the appropriate direction indicator, then the relevant lane will illuminate red. This will also be accompanied by a vibration felt through the steering wheel.

## ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp illuminates when the engine is running, there is an emissions related fault with the engine or transmission. The vehicle can be driven but may enter limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

## GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.