

# Maintenance

To prevent malfunction of the airbag system, always consult a Dealer/Authorised Repairer before fitting any of the following:

- Electronic equipment such as a mobile phone, 2-way radio, or in-car entertainment system.
- Accessories attached to the front of the vehicle.
- Any modification to the front of the vehicle.
- Any modification involving the removal or repair of any wiring or component in the vicinity of any of the airbag system components, including the steering wheel, steering column, instrument or fascia panels.
- Any modification to the fascia panels or steering wheel.

## ANTI-THEFT SYSTEM



**No modifications or additions should be made to the Anti-theft system. Such changes could cause the system to malfunction.**

## OWNER MAINTENANCE



Any significant or sudden drop in fluid levels, or uneven tyre wear, should be reported to a qualified technician without delay.

In addition to the routine services and inspections, a number of simple checks must be carried out more frequently. These checks can be carried out by the owner and advice is given on the pages that follow.

## DAILY CHECKS

- Operation of the lamps, horn, direction indicators, wipers, washers, and warning indicators.
- Operation of seat belts and brakes.
- Look for fluid deposits underneath the vehicle that might indicate a leak. Condensation drips from the Air Conditioning (A/C) system are normal.

## WEEKLY CHECKS

- Engine oil level.
- Engine coolant level.
- Brake fluid level.
- Power steering fluid level.
- Screen washer fluid level.
- Tyre pressures and condition.
- Operate the Air Conditioning (A/C).

**Note:** *The engine oil level should be checked more frequently if the vehicle is driven for prolonged periods at high speeds.*

## DIESEL PARTICULATE FILTER (DPF)

Diesel vehicles equipped with a particle filter have more efficient emissions control. The particles in the exhaust gases are collected in the filter during normal driving.