


## DOOR LOCKS AND RELEASE LEVERS

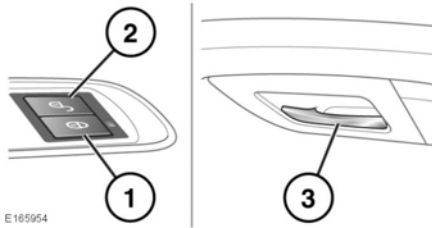

1. Press the lock button to lock the vehicle.
2. Press the unlock button to unlock the vehicle.
3. Pull the door lever to unlock/release the door. Operating the door lever on either front door will unlock all of the doors.

**Note:** If the car was locked using the Smart key, then operating the door lever will only unlock/release that door and the alarm will sound.

**Note:** If the vehicle has been Double locked, then the interior door levers will not operate. The vehicle must be unlocked using the Smart key.

## SINGLE LOCKING

Briefly press the external door handle's keyless locking sensor, or the Smart key's lock button, to Single lock the vehicle and activate the Perimeter alarm. See **15, PERIMETER ALARM**. The hazard warning lamps will flash once to confirm.

**Note:** Do not place your fingers around the back of the door handle while touching the keyless locking sensor. Doing so will prevent the vehicle from locking, as the keyless unlock sensor is located on the inner surface of the handle.

Single locking secures the vehicle and prevents the doors and the luggage compartment being opened from outside of the vehicle. The doors can be unlocked and opened from inside the vehicle.

**Note:** Always secure the vehicle when left unattended. Where possible, always secure the vehicle to the maximum available level of security.

## DOUBLE LOCKING



**Never Double lock the vehicle with people, children, or pets inside. In the event of an emergency, they would be unable to escape and the emergency services would be unable to release them quickly.**

Press the external door handle keyless locking sensor, or the Smart key lock button, twice within 3 seconds to Double lock the vehicle and activate the Full alarm system. See **15, FULL ALARM**. The hazard warning lamps will flash twice to confirm and (if enabled) an audible lock warning will sound.

**Note:** Do not place your fingers around the back of the door handle while touching the keyless locking sensor. Doing so will prevent the vehicle from locking.

**Note:** The Audible Lock Warning can be enabled/disabled via the **Vehicle Set-up** menu. See **47, INSTRUMENT PANEL MENU**.

Double locking secures the vehicle and prevents the doors and the luggage compartment being unlocked or opened from inside or outside of the vehicle. The vehicle can only be unlocked with the correct Smart key.