## Tyre pressure monitoring system (TPMS)

## RECOMMENDED TYRE PRESSURE LOOK-UP

The Instrument panel can be used to display the recommended cold tyre pressures for your vehicle. The tyre pressure look-up table can be accessed via the **Vehicle Information** and the **Tyre Information** menus.

For more information, see **47**, **INSTRUMENT PANEL MENU**.

Depending on the specification of the vehicle, a number of different values may be displayed to reflect different driving conditions, for example, high speed driving or for a heavily laden vehicle.



The tyre pressures displayed in the Instrument panel will not be valid if non-approved Jaguar wheels or tyres are fitted to the vehicle.

## **VEHICLE LOADING**

The sensitivity of the Tyre Pressure Monitoring System (TPMS) can be adjusted between Normal Load and Heavy Load, via the Instrument panel menus, Vehicle Info, Tyre Pressures and TPM Load Setting. The ignition will have to be switched on, without the engine running. See 47, INSTRUMENT PANEL MENU. Every time the ignition is switched on, a TPMS

Every time the ignition is switched on, a TPMS message will be displayed in the Message centre, to indicate which load setting is being monitored. The message will be either TPMS SET HEAVY LOAD or TPMS SET NORMAL LOAD.

**Note:** The TPMS setting must correspond with the vehicle's current load.

The **Normal Load** TPMS setting should be used during normal use of the vehicle, for example, up to 3 occupants and one luggage item. This setting may also improve the ride comfort, providing the weight restriction for passengers and luggage is not exceeded.

The **Heavy Load** TPMS setting should be used when the vehicle's load exceeds normal use and up to the Gross Vehicle Weight (GVW), for example, more than 3 occupants and one luggage item.

**Note:** Make sure that the tyre pressures are correct for the vehicle's current load. See **224**, **TYRE PRESSURES**.

## TEMPORARY-USE SPARE WHEEL AND TYRE CHANGE

If the temporary-use spare wheel is fitted, the system will automatically recognise the change in wheel positions. After approximately 10 minutes of driving above 25 km/h (16 mph), the message **FRONT[REAR] RIGHT[LEFT] TYRE PRESSURE NOT MONITORED** will be displayed, accompanied by illumination of the warning lamp.

The warning lamp will first flash and then illuminate continuously. Extended use of the temporary-use spare wheel will trigger the message TYRE PRESSURE MONITORING SYSTEM FAULT.

This Tyre Pressure Monitoring System (TPMS) display sequence will be activated at every ignition cycle until the temporary spare wheel is replaced by a full-size road wheel with a TPMS sensor fitted.

**Note:** If in use, always replace the temporary spare wheel before having a TPMS fault investigated.