

# Exiting the vehicle

When the vehicle is Double locked, an open window or an open sunroof will (if enabled) cause the alarm sensors to activate the alarm system, due to the movement of air currents. Make sure that all of the windows and the sunroof are fully closed before Double locking the vehicle.

**Note:** The **Alarm Sensors** can be enabled/disabled via the **Vehicle Set-up** menu.

## LOCK CONFIRMATION

If you are uncertain whether the vehicle is locked and armed (either by Single or Double locking), press the Smart key lock button and the hazard warning lamps will flash to indicate the current status; once for Single lock and twice for Double lock.

**Note:** If the vehicle is not already locked and armed, pressing the Smart key lock button will Single lock the vehicle, press the lock button again within 3 seconds to Double lock.

## MISLOCK

When trying to lock the vehicle with the Smart key, an audible mislock warning will sound twice if:

- Any of the doors, luggage compartment or bonnet are open or not securely latched.
- A malfunction of a lock or latch is detected.
- The ignition is on.

If a mislock occurs, then check the vehicle and if the problem persists consult a Dealer/Authorised Repairer.

**Note:** Operating the interior or exterior door handles, while attempting to unlock, lock, or change the child lock status of the vehicle (including Drive-away locking), may cause the security system to ignore any unlock, lock, or child lock requests.

## GLOBAL CLOSING



**Make sure that no children, pets, or obstructions are in any open aperture before operating Global closing.**

Make sure that all of the doors are closed and securely latched, then press and hold the lock button on the Smart key for 3 seconds. Alternatively, press and hold the external door handle keyless locking sensor for 3 seconds. The vehicle will Single lock and the alarm system will be fully armed immediately. After 3 seconds, all of the windows and the sunroof will close.

**Note:** Do not place your fingers around the back of the door handle while touching the keyless locking sensor. Doing so will prevent the vehicle from locking.

**Note:** If the Smart key's lock button, or the external door handle's keyless locking sensor, is released before the windows and the sunroof have fully closed, then the windows and the sunroof will stop closing.

**Note:** **Windows Global Close** can be enabled/disabled via the **Vehicle Set-up** menu. See **47, INSTRUMENT PANEL MENU**.

## KEYLESS LOCKING



Remove all the valid Smart keys and emergency key blades from the vehicle when it is left unattended. This will help to prevent the alarm from being disarmed, and therefore, help to prevent theft.



The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including in a laptop bag), games console, etc.

**Note:** The vehicle will not lock automatically.