

Entering the vehicle

Note: This situation may occur if the steering column is under load; e.g., the vehicle is parked with the steering on full lock and the steering wheel position inadvertently presses a front tyre against a kerb.

Note: If an engine start request is initiated, the engine will start, once the steering column is unlocked. See **100, STARTING THE ENGINE.**

If the steering column still does not unlock, then lock and unlock the vehicle again using the Smart key.


If the problem persists, seek qualified assistance immediately.

OPENING AND CLOSING THE LUGGAGE COMPARTMENT

- ❗ Do not open the luggage compartment if a cycle rack is fitted. Remove any cycles and/or racks before opening the luggage compartment.
- ❗ The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including in a laptop bag), games console, etc.
- ❗ The vehicle must not be driven with the luggage compartment lid unlatched and not completely closed.
- ❗ Any items placed in the luggage compartment should be arranged to allow the lid to be completely closed and securely latched.



Do not repeatedly attempt to close the luggage compartment after it automatically re-opens, or the latch may overheat. If the cause of the automatic re-opening cannot be determined, then unlock all of the doors and the luggage compartment with the Smart key. Make sure that all of the doors, the bonnet, and the luggage compartment are completely closed and then lock the vehicle again with the Smart key.

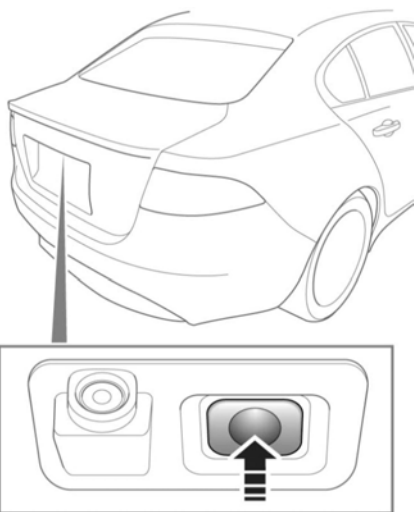

E165895

To open the luggage compartment, press the luggage compartment exterior release button (arrowed), if the vehicle is not locked. Alternatively, press the relevant Smart key button. See **6, UNLOCKING THE VEHICLE.**

To close the luggage compartment, lower the luggage compartment lid to the fully latched/closed position.




E165900

Powered luggage compartments can also be opened by pressing the interior release button, located on the driver's side lower fascia. When the lid is fully open, press the button again to close.

Note: If the button is pressed again, before the luggage compartment lid is fully open, then movement of the lid will stop.



While the powered luggage compartment is open, the locking latch is exposed. Do not attempt to manually close the latch, as it may also automatically soft-close and trap items or body parts.

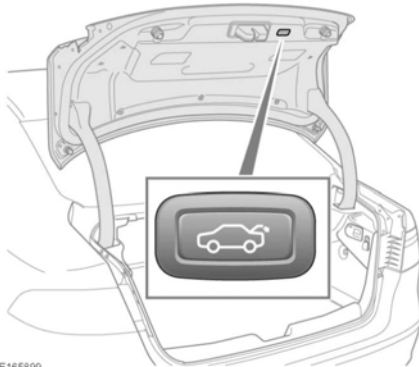

E165899

Powered luggage compartments can also be closed by pressing the luggage compartment close button.

Note: If an obstruction is detected, the powered luggage compartment lid will return to the fully open position. Remove any obstruction and then press the close button again.

If the luggage compartment lid is opened, after the vehicle has been Single locked (see **13, SINGLE LOCKING**) or Double locked (see **13, DOUBLE LOCKING**), then make sure that the Smart key remains outside of the vehicle and is less than one metre away from the rear of the vehicle, so that the luggage compartment lid will then lock again after closing. The hazard warning lamps will flash once to confirm.

If a valid Smart key is detected within the vehicle, or a valid Smart key is not detected within a metre of the rear of the vehicle, then the luggage compartment lid will re-open to the unlatched position and an audible mislock warning will sound. This may also prevent the operation of the close button, for vehicles with a powered luggage compartment lid.

Note: Do not store any valid Smart keys inside the vehicle.