
## **SURROUND CAMERA SYSTEM**





It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when manoeuvring the vehicle.

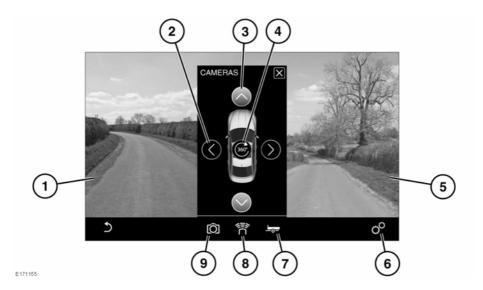

To switch on the Surround camera system, press the button on the left-side of the Touch screen or select Cameras in Extra features. See 78, EXTRA FEATURES.

- 1. Left-side split screen image.
- 2. Camera selection arrow (not selected).
- 3. Camera selection arrow (camera selected).
- **4.** 360° view: Touch to display a birds-eye view of the vehicle and its immediate surroundings, using all 4 cameras.
- 5. Right-side split screen image.
- **6.** Touch to select the **CAMERA SETTINGS** menu.
  - Hitch Assist, select OFF or ON.

- Parking Guidance, select OFF or ON.
- Parking Aid Graphics, select OFF or ON.
- PDC Plan View, select OFF or ON.
- Touch to select Trailer assist. Before towing, select to add a trailer to the system or select a trailer already entered into the system. To add a trailer, follow the on-screen instructions.
- 8. Touch to select Parking aids. See 115, USING THE PARKING AID.
- 9. Touch to select Surround cameras.

A maximum of 2 views can be displayed at one time (instead of the 360° view). To change a camera view if 2 views are already selected, one of the views has to be deselected first.



When shown, touch to enlarge to full screen or a wider view image.

General information:

The location of the 4 surround cameras are:

- One located on the centre of the front lower grille.
- One on the luggage compartment lid, above the rear number plate.
- One underneath each of the exterior door mirrors.

**Note:** The quality of the camera views may vary in different lighting conditions.



To maintain maximum performance, the cameras should be kept free from ice, frost and dirt. See 200, SENSORS AND CAMERAS.

## Camera shortcuts



Press the Surround camera hard button for the following shortcut options:

- When in Reverse (R):
  - Press once to select the **Rear Junction** View.
  - Press twice to select the **T Junction**View
  - Press a third time to return to the Rear Junction View.
- When in a forward gear, at speeds below 10 km/h (6 mph):
  - Press once to select the **T Junction** View
  - Press twice to select the **Rear Junction**View.
  - Press a third time to return to the T Junction View.
- When in Neutral (N) or Park (P):
  - Press once to select the Plan View.
  - Press twice to select the T Junction View.
  - Press a third time to select the Rear Junction View.