


## SURROUND CAMERA SYSTEM

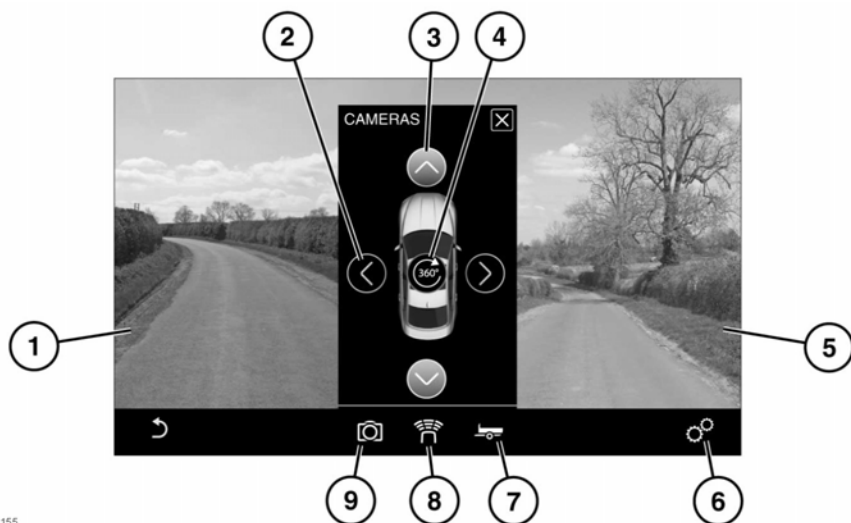

E171155



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when manoeuvring the vehicle.



To switch on the Surround camera system, press the button on the left-side of the Touch screen or select **Cameras** in **Extra features**. See **78, EXTRA FEATURES**.

1. Left-side split screen image.
2. Camera selection arrow (not selected).
3. Camera selection arrow (camera selected).
4. 360° view: Touch to display a birds-eye view of the vehicle and its immediate surroundings, using all 4 cameras.
5. Right-side split screen image.
6. Touch to select the **CAMERA SETTINGS** menu.
  - **Hitch Assist**, select **OFF** or **ON**.
  - **Parking Guidance**, select **OFF** or **ON**.
  - **Parking Aid Graphics**, select **OFF** or **ON**.
  - **PDC Plan View**, select **OFF** or **ON**.
7. Touch to select **Trailer assist**. Before towing, select to add a trailer to the system or select a trailer already entered into the system. To add a trailer, follow the on-screen instructions.
8. Touch to select **Parking aids**. See **115, USING THE PARKING AID**.
9. Touch to select **Surround cameras**.

A maximum of 2 views can be displayed at one time (instead of the 360° view). To change a camera view if 2 views are already selected, one of the views has to be deselected first.



When shown, touch to enlarge to full screen or a wider view image.

General information:

The location of the 4 surround cameras are:

- One located on the centre of the front lower grille.
- One on the luggage compartment lid, above the rear number plate.
- One underneath each of the exterior door mirrors.

**Note:** The quality of the camera views may vary in different lighting conditions.



**To maintain maximum performance, the cameras should be kept free from ice, frost and dirt. See 200, SENSORS AND CAMERAS.**

### Camera shortcuts



Press the Surround camera hard button for the following shortcut options:

- When in Reverse (**R**):
  - Press once to select the **Rear Junction View**.
  - Press twice to select the **T Junction View**.
  - Press a third time to return to the **Rear Junction View**.
- When in a forward gear, at speeds below 10 km/h (6 mph):
  - Press once to select the **T Junction View**.
  - Press twice to select the **Rear Junction View**.
  - Press a third time to return to the **T Junction View**.
- When in Neutral (**N**) or Park (**P**):
  - Press once to select the **Plan View**.
  - Press twice to select the **T Junction View**.
  - Press a third time to select the **Rear Junction View**.