



E165348

A graphic in the Message centre also indicates which seat belts are fastened at the start of a journey and also when a seat belt is fastened or unfastened during a journey.

Each seating position is represented by a passenger icon, the colour and symbol of which indicates the seat belt status:

- Tick - seat belt in the indicated position is fastened.
- Cross - seat belt in the indicated position has been unfastened while the vehicle's ignition is on. This indicator will turn grey after 30 seconds.
- Grey - seat belt not fastened.

Note: *The indicators will be displayed for 30 seconds each time there is a status change, e.g., a seat belt is unfastened/fastened, or a door is opened and then closed.*

In addition, an audible warning will sound if the driver's, or any occupied passenger's seat belt is not fastened, or is unfastened during a journey.

Note: *If a heavy object is placed on a passenger seat, it may activate the Seat belt reminder feature. It is recommended that the object be placed in the luggage compartment or secured using the seat belt.*

SEAT BELT PRE-TENSIONERS

The Seat belt pre-tensioners activate in conjunction with the Supplementary Restraint System (SRS) to provide additional protection in the event of a severe frontal impact. They automatically reduce any slack in a seat belt to reduce the forward movement of a seat occupant.

Note: *The rear middle seat is not fitted with a seat belt pre-tensioner.*



The Seat belt pre-tensioners will activate only once and then must be replaced. Failure to replace them will reduce the effectiveness of the SRS in reducing the risk of serious injury or death in the event of an accident.



After any impact, have the seat belts and pre-tensioners checked and, if necessary, replaced by a Dealer/Authorised Repairer.