

# Touch screen

- **Screensaver:** Switch **ON/OFF**.
- **Dynamic Home Menu:** Switch **ON/OFF**.
- **Delete all personal data.**

***Note:** The list will vary, depending on the specification of the vehicle.*

## EXTRA FEATURES

Touch the required extra feature to display that feature's information or settings screen:

- **Timed climate:** See **82, TIMED CLIMATE CONTROL**.
- **Cameras:** See **124, SURROUND CAMERA SYSTEM**.
- **ECO Data:** The ECO Data system is designed to help the driver maximise fuel economy by providing on-screen vehicle data. Touch to select the **ECO Data** home screen. See **135, ECO**.
- **Valet mode:** See **78, SELECTING VALET MODE**.
- **Ambient lighting:** When selected, the ambient lighting in the vehicle can be changed.
- **WiFi hotspot:** See **162, INCONTROL WI-FI**.
- **Screen off:** Touch to turn the screen off.

***Note:** The number of extra features will vary, depending on the specification of the vehicle.*

## SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the luggage compartment. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

To select Valet mode:

1. Touch **Valet mode** in **Extra features**.
2. Enter a memorable 4-digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the **Valet mode On** screen is displayed.

## DESELECTING VALET MODE

To deselect Valet mode:

1. When you re-enter the vehicle, select **Valet mode** in **Extra features**.
2. Enter your memorable 4-digit PIN and touch the **OK** soft key.

**Valet mode deactivated** is displayed to indicate that the PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The Touch screen will be enabled.

***Note:** If the PIN is forgotten, Valet mode can only be deactivated by a Dealer/Authorised Repairer.*