

## DRIVER EXIT

**Note:** *The Driver exit feature is only available when Intelligent stop/start is enabled.*

To prevent the vehicle from being inadvertently left in a driveable condition, the vehicle will detect when a driver is not present, and automatically switch off the ignition.

If Drive (**D**) , Sport (**S**), or Neutral (**N**) is selected, the Driver exit feature will switch the vehicle's ignition off if the following conditions exist:

- The driver's seat belt is unbuckled, and:
- The brake pedal is released.

If Park (**P**) is selected, the Driver exit feature will switch the vehicle's ignition off, if the driver's seat belt is unbuckled.

Once the vehicle's ignition has been switched off, the vehicle can be locked. See **13, SINGLE LOCKING**.