
## **PORTABLE MEDIA CONTROLS**

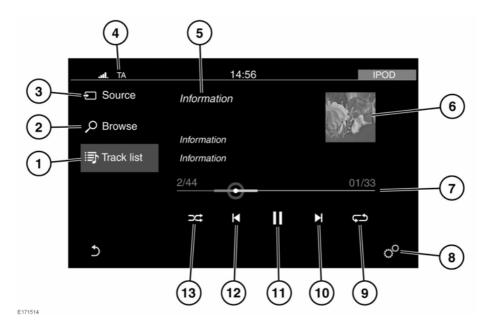

The following portable devices can be used on the Media system: **iPod**, **USB**, **AUX**, and **Bluetooth**® wireless technology devices.

- 1. Track list: Touch to select the list of tracks from the connected device.
- Browse: Touch to select the menu screen for the required music or audio source subject list for the connected device: Playlists, Artists, Albums, Songs, etc.
- Source: Touch to select the media source menu screen.

**Note:** The media source has to be connected to the vehicle before it will appear in the media source list.

- 4. Status icons: Showing the connected phone's battery level and network signal strength. The Traffic Announcement (TA) icon will also be displayed, if TA is currently switched on. See 144, AUDIO SETTINGS.
- **5.** Information relating to the music or audio being played.
- 6. Image display: If available, the album art for the current track being played will be displayed. The image will also appear on the Media soft key on the HOME menu. See 76, TOUCH SCREEN CONTROLS.
- Progress bar: Drag the spot or touch the line to move forwards or backwards through the track.
- 8. Touch to select the **General settings** menu screen. **Audio** or **Bluetooth** settings can then be selected.