


PORTABLE MEDIA CONTROLS

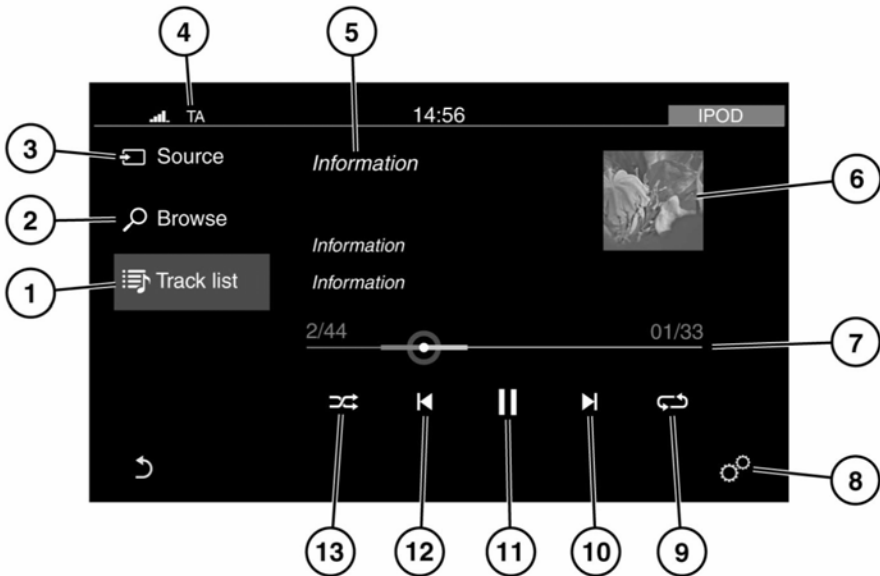

E171514

The following portable devices can be used on the Media system: **iPod**, **USB**, **AUX**, and **Bluetooth®** wireless technology devices.

- 1. Track list:** Touch to select the list of tracks from the connected device.
- 2. Browse:** Touch to select the menu screen for the required music or audio source subject list for the connected device: **Playlists**, **Artists**, **Albums**, **Songs**, etc.
- 3. Source:** Touch to select the media source menu screen.

Note: The media source has to be connected to the vehicle before it will appear in the media source list.

- 4. Status icons:** Showing the connected phone's battery level and network signal strength. The Traffic Announcement (**TA**) icon will also be displayed, if TA is currently switched on. See **144, AUDIO SETTINGS**.
- 5. Information** relating to the music or audio being played.
- 6. Image display:** If available, the album art for the current track being played will be displayed. The image will also appear on the **Media** soft key on the **HOME** menu. See **76, TOUCH SCREEN CONTROLS**.
- 7. Progress bar:** Drag the spot or touch the line to move forwards or backwards through the track.
- 8. Touch** to select the **General settings** menu screen. **Audio** or **Bluetooth** settings can then be selected.