Heating and ventilation

- Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.
- Air distribution: Press to select the desired air distribution via the FRONT CLIMATE screen.
- **13.** Press to select the **Front Seats** Heated/Climate seat menu.
- 14. AUTO mode: Press to switch the fully automatic mode on/off. Dependent on the vehicle's specification, the various options for AUTO mode can be set via the Climate settings.
- 15. Press repeatedly to increase the temperature for the front right side of the vehicle.
- Press repeatedly to decrease the temperature for the front right side of the vehicle.
- **17. A/C**: Press to switch the Air conditioning (A/C) system on/off.
- **18. MAX A/C**: Press to switch the maximum A/C mode on/off.
- **19.** Press to increase the blower speed.
- 20. Press to decrease the blower speed.
- **21.** Press to switch the maximum defrost for the windscreen on/off.
- 22. Recirculation: Press for timed recirculation (recirculation will operate for 4 minutes) or press and hold for continuous recirculation. Press again to switch off.

Note: Prolonged use at low temperatures may cause the windows to mist

23. Press to decrease the temperature for the front left side of the vehicle.

Note: Some of the hard keys will have an LED indicator lamp that will illuminate to confirm selection.

INSTRUCTIONAL VIDEO



CLIMATE SETTINGS

Touch the **General settings** menu soft key on the **FRONT CLIMATE** menu screen and then select **Climate**. See **79. CLIMATE CONTROL**.

- Auto sensitivity: The Air quality sensor, for Automatic recirculation, can be set to Low, Medium or High. Select Off to disable Automatic recirculation.
- Auto power: The blower speed for automatic operation can be set to Low, Medium or High.
- Auto heated screens: The automatic operation of the front and/or the rear heated screens can be enabled/disabled.

Note: Selection of the **ECO** driving mode may automatically alter some status and settings for these menus (dependent on previous selections). See **135**, **ECO**.

AUTOMATIC RECIRCULATION

If an Air quality sensor is fitted, the Climate control system will monitor exterior air pollution and select recirculation if it reaches a predetermined level. This feature only operates when selected from the **Settings** menu. Recirculation sensitivity can also be changed in the **Settings** menu. See **81**, **AIR QUALITY SENSOR**

Pressing the recirculation button will not deactivate automatic recirculation