

 Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.

12. Air distribution: Press to select the desired air distribution via the **FRONT CLIMATE** screen.

13. Press to select the **Front Seats** Heated/Climate seat menu.

14. **AUTO** mode: Press to switch the fully automatic mode on/off. Dependent on the vehicle's specification, the various options for **AUTO** mode can be set via the Climate settings.

15. Press repeatedly to increase the temperature for the front right side of the vehicle.

16. Press repeatedly to decrease the temperature for the front right side of the vehicle.

17. **A/C**: Press to switch the Air conditioning (A/C) system on/off.

18. **MAX A/C**: Press to switch the maximum A/C mode on/off.

19. Press to increase the blower speed.

20. Press to decrease the blower speed.

21. Press to switch the maximum defrost for the windscreen on/off.

22. Recirculation: Press for timed recirculation (recirculation will operate for 4 minutes) or press and hold for continuous recirculation. Press again to switch off.

***Note:** Prolonged use at low temperatures may cause the windows to mist*

23. Press to decrease the temperature for the front left side of the vehicle.

***Note:** Some of the hard keys will have an LED indicator lamp that will illuminate to confirm selection.*

INSTRUCTIONAL VIDEO



E173294

CLIMATE SETTINGS

Touch the **General settings** menu soft key on the **FRONT CLIMATE** menu screen and then select **Climate**. See 79, **CLIMATE CONTROL**.

- **Auto sensitivity:** The Air quality sensor, for Automatic recirculation, can be set to **Low**, **Medium** or **High**. Select **Off** to disable Automatic recirculation.
- **Auto power:** The blower speed for automatic operation can be set to **Low**, **Medium** or **High**.
- **Auto heated screens:** The automatic operation of the front and/or the rear heated screens can be enabled/disabled.

***Note:** Selection of the **ECO** driving mode may automatically alter some status and settings for these menus (dependent on previous selections). See 135, **ECO**.*

AUTOMATIC RECIRCULATION

If an Air quality sensor is fitted, the Climate control system will monitor exterior air pollution and select recirculation if it reaches a predetermined level. This feature only operates when selected from the **Settings** menu. Recirculation sensitivity can also be changed in the **Settings** menu. See 81, **AIR QUALITY SENSOR**.

Pressing the recirculation button will not deactivate automatic recirculation.