



FLUID FILLER LOCATIONS

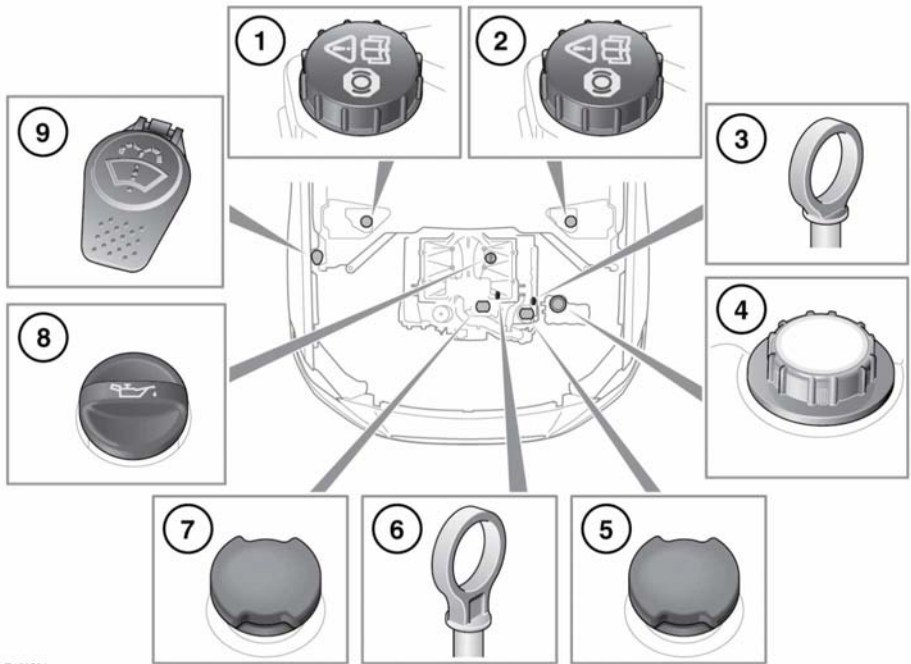

E164561

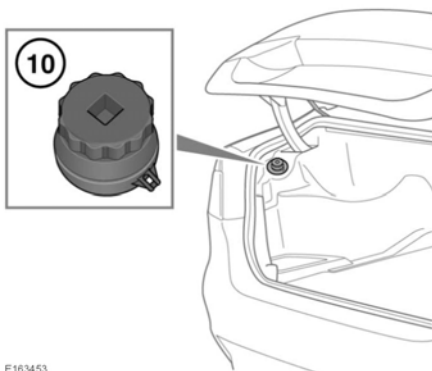

E163453

1. Brake fluid reservoir cap (right hand drive). Remove the right side under bonnet cover for access.
2. Brake fluid reservoir cap (left hand drive). Remove the left side under bonnet cover for access.
3. Engine oil level dipstick (2.0L diesel).
4. Engine coolant reservoir filler cap.
5. Engine oil filler cap (3.0L petrol).
6. Engine oil level dipstick (2.0L petrol).
7. Engine oil filler cap (2.0L diesel).
8. Engine oil filler cap (2.0 petrol).
9. Washer fluid reservoir filler cap.
10. Diesel Exhaust Fluid (DEF) reservoir filler cap.