


TOUCH SCREEN CONTROLS

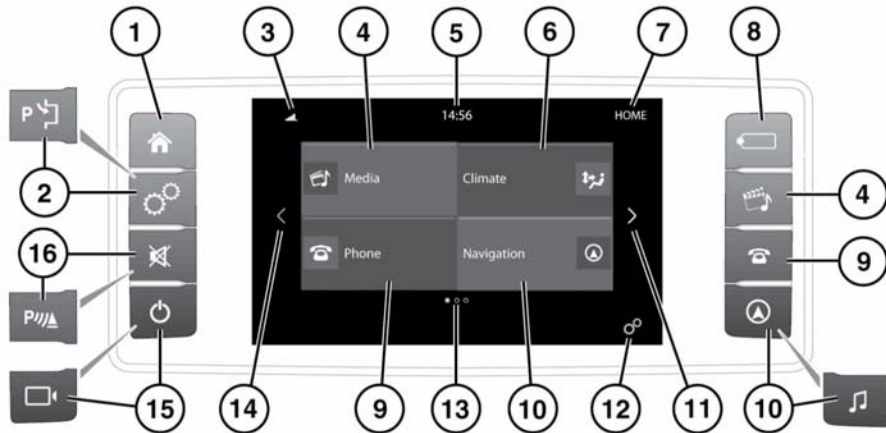

E167919

⚠ Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.

ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.

ⓘ Avoid spilling or splashing liquids onto the Touch screen.

Note: The Touch screen display and the number of screen pages will vary, depending on the specification of the vehicle.

Note: The Touch screen will remain active until the ignition is turned off and the driver's door is opened.

1. Press to select the **HOME** menu screen.
2. Press to select the **General settings** menu screen, see **77, GENERAL SETTINGS**. If Park assist is fitted, then see **120, PARK ASSIST**.

3. Status icons: Showing the connected phone's battery level and network signal strength. The Traffic Announcement (**TA**) icon will also be displayed, if TA is currently switched on. See **144, AUDIO SETTINGS**.
4. Touch the screen or press the button, to select the **Media** system. If the Media system is already switched on, then touch to select the current media source menu.

Note: When the system is active, current information for the media being played will be displayed.

5. Clock: The clock can be adjusted via the **System** option, in the **General settings** menu.
6. Touch to select the **Climate** system. See **79, CLIMATE CONTROL**.
7. The title of the current screen display.
8. Continually press to scroll through the media source options.
9. Touch the screen or press the button, to select the **Telephone** system. See **157, TELEPHONE SYSTEM OVERVIEW**.