
LABEL LOCATIONS



Warning labels attached to your vehicle bearing this symbol mean:
Do not touch or adjust components until you have read the relevant instructions in the handbook.

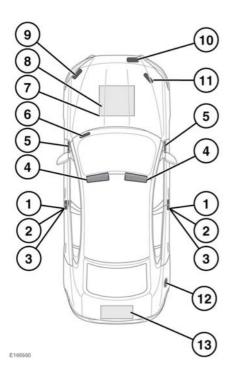

 The vehicle weights and the Vehicle Identification Number (VIN) label: Located at the base of the driver's side B pillar. The vehicle build-date plate (Australian vehicles only) will also be located here.
 See 47, INSTRUMENT PANEL MENU. The

See 47, INSTRUMENT PANEL MENU. The VIN can also be shown in the Message centre via the Vehicle Info and Vehicle VIN menus.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the ignition is switched on.

Extra information labels may also be found at these locations.

Note: If you need to communicate with a Dealer/Authorised Repairer, you may be asked to quote the VIN number.

- 2. Tyre pressure label: Located at the base of the driver's side B pillar.
- **3.** Airbag warning label: Located midway up the B pillar.
- **4.** Airbag label: Located on the sun visors.
- **5.** Passenger airbag label: Located at the passenger end of the fascia panel.

Vehicle labels

- VIN: Stamped on a plate, which is visible through the bottom left side of the windscreen.
- 7. Engine serial number: Stamped into the left side rear of the engine casing.
- Engine serial number label: Located at the top of the engine. Remove the engine cover for access.
- **9.** Air Conditioning (A/C) label: Located on the left-side bonnet locking platform.
- **10.** Exhaust emissions label: Located on the underside of the bonnet.
- **11.** VIN number: Stamped onto the suspension turret.
- **12.** Fuel specification label: Located on the inside face of the fuel filler flap.
- 13. Battery warning symbols label: Located on the top face of the vehicle's main battery, underneath the luggage compartment floor panel.

It is important that you are familiar with these subjects to make sure that your vehicle and its features are used safely. Using the index at the back of this handbook, refer to the relevant topic for more information.