

# Vehicle battery

2. Lightly pull up this access cover to release.  
Follow this procedure to connect and disconnect the jump leads:

1. Connect one end of the positive (Red) jump lead to the positive boost terminal on the donor vehicle.

**Note:** Refer to the donor vehicle's handbook for the recommended boost terminal location.

2. Connect the other end of the positive (Red) jump lead to the disabled vehicle's (under bonnet) positive boost point terminal.

3. Connect one end of the negative (Black) jump lead to the negative boost terminal on the donor vehicle.

**Note:** Refer to the donor vehicle's handbook for the recommended boost terminal location.

4. Connect the other end of the negative (Black) jump lead to the disabled vehicle's (under bonnet) negative boost point terminal.

**Note:** Check that all cables are clear of any moving components, and that all 4 connections are secure.

5. Start the engine of the donor vehicle, and allow it to idle for a few minutes.

6. Start the engine of the disabled vehicle.

**Note:** Do not switch on any electrical circuits on the previously disabled vehicle, until after the jump leads have been removed.

7. Allow both vehicles to idle for a few minutes.

8. Switch off the donor vehicle.

9. Disconnect the negative (Black) jump lead from the disabled vehicle.

10. Disconnect the negative (Black) jump lead from the donor vehicle.

11. Disconnect the positive (Red) jump lead from the disabled vehicle.

12. Disconnect the positive (Red) jump lead from the donor vehicle.

Refit the positive boost point terminal access covers and close the bonnet.

## CONNECTING A STARTING AID



**Do not connect the starting aid to any battery terminal on your vehicle. Doing so may cause a spark, which can result in an explosion. It may also result in damage to the charging system.**

Open the bonnet, locate the engine compartment front fuse box and release the 2 covers to access the positive boost point terminal. See **210, CONNECTING JUMP LEADS**.

To start the vehicle using a starting aid, follow the procedure below:

1. Connect the positive (Red) cable to the vehicle's (under bonnet) positive boost point terminal.

2. Connect the negative (Black) cable to the vehicle's (under-bonnet) negative boost point terminal.

3. Connect/switch on the starting aid.

4. Start the engine and allow it to idle for a few minutes.

5. Disconnect/switch off the starting aid.

6. Disconnect the negative (Black) cable from the vehicle.

7. Disconnect the positive (Red) cable from the vehicle.

Refit the positive boost point terminal access covers and close the bonnet.