

## BLUETOOTH® INFORMATION

**Bluetooth®** is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Jaguar **Bluetooth** wireless technology system supports **Bluetooth®** Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP), Audio Video Remote Control Profile (AVRCP) and Message Access Profile (MAP).

***Note:** HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.*

Before making use of the vehicle's **Bluetooth** wireless technology phone system, your **Bluetooth** wireless technology device must be paired and connected to the vehicle's system. This is done using one of two methods; via your phone to the vehicle (preferred method) or from the Touch screen to your phone. If one of these methods is not successful, try the other option.

Each time the ignition is switched on, the system will attempt to connect with the last connected phone.

As mobile phones have a wide range of audio and echo characteristics, it may take a few seconds for the vehicle's system to adapt and deliver optimum audio performance. To achieve this, it may be necessary to reduce the in-vehicle volume and ventilation fan speed slightly.

## TELEPHONE COMPATIBILITY

For a list of compatible phones, please access the Jaguar website at [www.jaguar.com](http://www.jaguar.com). In the **Owners** section, refer to **Bluetooth Connectivity**.

***Note:** The **Bluetooth®** wireless technology devices listed, have been tested for compatibility with Jaguar vehicles. Performance will vary, based on the phone's software version, battery condition, coverage, and your network provider. Phones are warranted by their manufacturer, not Jaguar.*

## PAIRING AND CONNECTING A BLUETOOTH® PHONE OR DEVICE

A paired phone or device can be connected for different uses; phone or music. Pairing is normally only required once.

When the ignition is switched on, the vehicle automatically tries to re-connect to a previously paired **Bluetooth®** phone or device, if it is within range of the vehicle.

If not automatically connected, or to connect a new phone or device, follow one of the following pairing methods:

### Pairing using the phone or device (preferred method):

1. Switch the ignition on and make sure the Touch screen is active.
2. Select **General settings**, then **Bluetooth**.
3. From the list, select **Make system discoverable**.
4. Switch on your phone or device's **Bluetooth** wireless technology device connection. Using your phone or device, search for and select your vehicle's **Bluetooth** connection (see your phone or device's operating instructions for more information).
5. A Passkey number appears on the phone or device. If this number matches the number on the Touch screen, touch **Yes**, or press **Pair** on the phone or device.