

**Note:** *Keyless entry will unlock the vehicle in accordance with the current security setting (Single-point or Multi-point entry). However, if Single-point entry is the current setting and a door, other than the driver's door is opened first, all of the doors will unlock.*

When all of the open doors have been closed, after entering the vehicle, the system will search the vehicle's interior for a valid Smart key. If a valid Smart key is not detected, **SMART KEY NOT FOUND** will be displayed in the Message centre. If this situation occurs, then use a valid Smart key to carry out the Keyless start backup procedure. See **101, KEYLESS START BACKUP**.

The security system fitted to this vehicle is Thatcham category 1 approved and meets EU regulations 97/116 and EU directive 95/56 EC.

## INSTRUCTIONAL VIDEO



E173308

## CONVENIENCE MODE

When a door is opened using either the Smart key or Keyless entry, the vehicle's electrical system will initiate the Convenience mode. The following systems become functional:

- Driver's seat position memory.
- Seat and steering column adjustment.
- Interior and exterior lighting.
- Message centre.
- Auxiliary power sockets.

## GLOBAL OPENING

Press and hold the unlock button on the Smart key for 3 seconds. The vehicle will unlock and the alarm will be disarmed. After 3 seconds, all of the windows and the sunroof will open.

To stop window movement during Global opening when using the Smart key, press any of the buttons on the Smart key or operate the driver's window switch. To stop a particular window from opening, operate the relevant window switch.

**Note:** *Windows Global Open can be enabled/disabled via the **Vehicle Set-up** menu. See **47, INSTRUMENT PANEL MENU**.*

## DRIVE-AWAY LOCKING

Drive-away locking automatically locks all of the doors when the vehicle is in motion. This feature can be enabled/disabled and the speed at which it activates can be selected, via the **Vehicle Set-up** menu. See **47, INSTRUMENT PANEL MENU**.

**Note:** *Pressing the unlock/lock lever on either of the front doors, after Drive-away locking has taken place, will override Drive-away locking for the current journey. See **13, DOOR LOCKS AND RELEASE LEVERS**.*

If a door is individually unlocked and opened, all of the doors will relock when the open door is subsequently closed.

## STEERING COLUMN LOCK

The electric steering column lock will lock/unlock when the vehicle is locked/unlocked.

If the steering column fails to unlock, a message will be displayed in the Message centre. If this occurs, then gently rotate the steering wheel to the left and the right.