


PORTABLE MEDIA CONTROLS

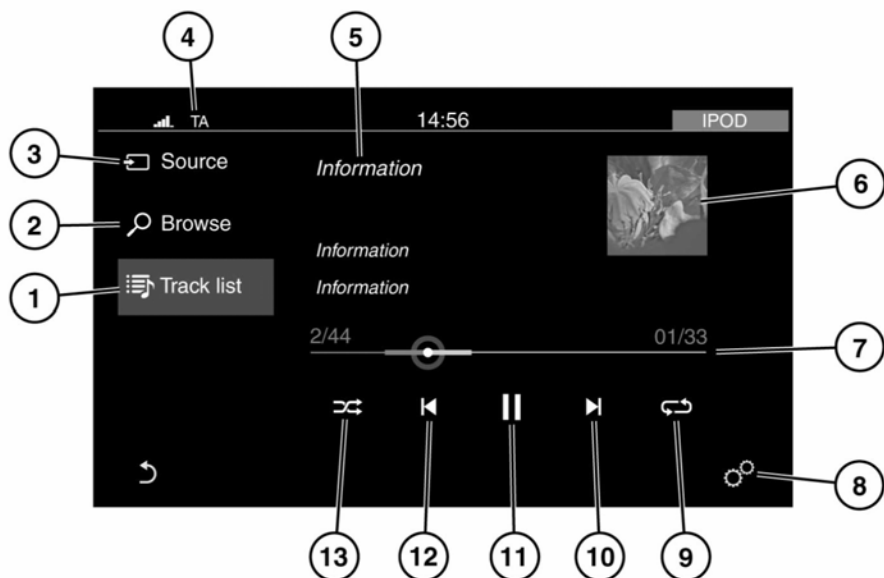

E171514

The following portable devices can be used on the Media system: **iPod**, **USB**, **AUX**, and **Bluetooth®** wireless technology devices.

Note: Auxiliary devices have no Touch screen controls.

- 1. Track list:** Touch to select the list of tracks from the connected device.
- 2. Browse:** Touch to select the menu screen for the required music or audio source subject list for the connected device: **Playlists**, **Artists**, **Albums**, **Songs**, etc.
- 3. Source:** Touch to select the media source menu screen.

Note: The media source has to be connected to the vehicle before it will appear in the media source list.

- 4. Status icons:** When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed.
- 5. Information relating to the music or audio being played.**
- 6. Image display:**
 - If available, the album art for the current track being played will be displayed.
 - When a video (from a connected USB source only) is about to be played, an image from the video is displayed.
- 7. Progress bar:** Drag the spot or touch the line to move forwards or backwards through the track.
- 8. Touch to select the **SETTINGS** pop-up menu.** Select **Media** or **Bluetooth**, via the **Settings** option.