

- 12. Heated front screen: Press to switch on/off.
- 13. Heated rear screen: Press to switch on/off.

**Note:** The heated front and rear screens, will operate only when the engine is running.

- ❗ Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.

- 14. Air distribution: Press to select the desired air distribution via the **FRONT CLIMATE** screen.

- 15. Press to select the Heated/Climate seat menu.

- 16. **AUTO** mode: Press to switch the fully automatic mode on/off. Dependent on the vehicle's specification, the various options for **AUTO** mode can be set via the **CLIMATE SETTINGS** menu.

- 17. Press repeatedly to increase the temperature for the front right side of the vehicle.

- 18. Press repeatedly to decrease the temperature for the front left side of the vehicle.

- 19. Recirculation: Press for timed recirculation (recirculation will operate for 4 minutes) or press and hold for continuous recirculation. Press again to switch off.


**Note:** Prolonged use at low temperatures may cause the windows to mist.

- 20. Press to switch maximum defrost for the windscreen on/off.
- 21. Press to decrease the blower speed.
- 22. Press to increase the blower speed.
- 23. **MAX A/C**: Press to switch the maximum air conditioning (A/C) mode on/off.
- 24. **A/C**: Press to switch the air conditioning (A/C) system on/off.

- 25. Press repeatedly to decrease the temperature for the front right side of the vehicle.

**Note:** Some of the buttons will have an LED indicator lamp that will illuminate to confirm selection.

## Cooled Glove Box

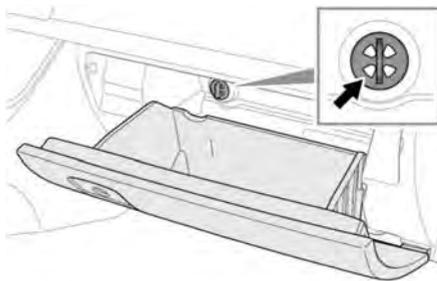

The glove box temperature can be controlled using the vent located in the glove box. Rotate counter-clockwise to open, or clockwise to close the vent.

**Note:** The glove box temperature can only be reduced if the engine is running, and the air conditioning is switched on.

## INSTRUCTIONAL VIDEO



## CLIMATE SETTINGS

Touch the **GENERAL SETTINGS** menu soft key on the **FRONT CLIMATE** menu screen and then select **Climate**. See 78, **CLIMATE CONTROL**.