


## TOW BALL OPTIONS

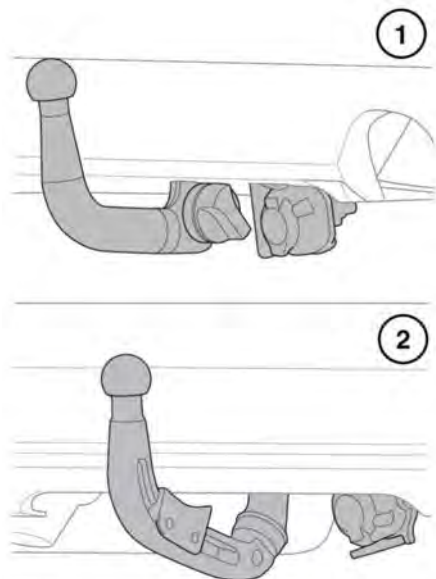

E167073

The available tow ball options for this vehicle are:

1. Quick release, detachable tow ball. See **93, FITTING THE DETACHABLE TOW BALL.**
2. Electrically deployable, powered tow ball. See **94, POWERED TOW BALL.**

**Note:** The tow ball options are dependent on the market and the vehicle's specification.

## TRAILER STABILITY ASSIST (TSA)

When a trailer is attached, TSA will automatically detect when trailer sway is developing. It will then gradually reduce the vehicle's speed, by cutting engine power and applying the brakes to help regain control.

⚠️ TSA will not operate in the event of the trailer jack-knifing.

⚠️ The ability of TSA may be reduced when travelling on slippery surfaces.

**Note:** TSA will not operate when Dynamic Stability Control (DSC) is switched off.

## HITCH GUIDANCE

Hitch guidance is a user selectable Touch screen feature that can aid the process of guiding the vehicle to a trailer's tow hitch. Use Hitch guidance while reversing the vehicle to a trailer hitch.

Proceed, as follows:

1. Select reverse gear. Dependent on the vehicle's specification, the Touch screen will automatically display selectable icons or a menu list.
2. Touch the Hitch guidance menu or the icon, on the Touch screen, to enable the guidance lines to be displayed.
3. Reverse the vehicle towards the trailer.
4. As the vehicle closes to within 600 mm of the trailer's tow hitch, an automated zoom feature is operated to enlarge the view.
5. Continue the manoeuvre carefully until the vehicle and trailer are as close as required.

## TOW ASSIST

**Note:** Trailer guidance requires a connected trailer to be fitted with a tracking target sticker, which **must** be attached according to specific instructions. Ask a Retailer/Authorised Repairer for details.



E134952

# Towing

**Note:** *This feature may not operate with all trailer designs.*

Trailer guidance aids trailer reversing, by displaying guidance lines on the Touch screen.

Trailer guidance becomes active when a trailer/caravan is attached to the vehicle and the trailer's electrical plug is attached to the vehicle's socket.

**Note:** *The driver's door must be opened and closed after the trailer/caravan is connected to the electrical socket, before the system will detect the connection.*

The screen will display a choice for connection. Select **YES** to move to the setup screen. Select **NO** to return to the previous screen.

**Note:** *If the connection is not detected, setup can be manually prompted by touching the Trailer assist soft key on the Cameras menu.*

On first use, the setup screens take the user through a series of configuration options for the connected trailer. Information such as trailer hitch length, number of axles and camera preference, is required to finalise setup. Once completed, the details are stored for future use.

When a new or existing trailer configuration is selected, Trailer guidance automatically displays on the Touch screen when Reverse (**R**) gear is selected. Coloured lines are displayed to indicate the predicted path of both the trailer and the vehicle.