

EMERGENCY STOP SIGNAL (ESS)

ESS automatically activates the hazard warning lamps during emergency braking, to warn other road users and reduce the risk of a collision.

HILL START ASSIST

Hill start assist activates when starting a hill ascent from a stationary position. When the brake pedal is released, Hill start assist will smoothly release the brake pressure, allowing the vehicle to move away without rolling backwards.

Any fault with the Hill start assist system will be indicated by the Dynamic Stability Control (DSC) OFF (AMBER) warning lamp being illuminated and a message in the Message centre. See **53, DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)**.