

- The fuse box is accessed by removing the right side luggage compartment access panel. Turn the retaining lug 90 degrees counter-clockwise, to release and remove the access panel.

**Note:** This fuse box also has spare fuses and the vehicle's fuse removal tool.

- Luggage compartment upper fuse box.
  - The fuse box is accessed by removing the right side luggage compartment access panel. Turn the retaining lug 90 degrees counter-clockwise, to release and remove the access panel.

## CHANGING A FUSE



Always turn off the ignition system and the affected electrical circuit, before replacing a fuse.



Only fit Jaguar approved replacement fuses of the same rating and type, or fuses of matching specification.



If the replacement fuse blows after installation, the system should be checked by a Retailer/Authorised Repairer.

**Note:** Jaguar recommend that only qualified personnel should remove or replace relays.

The vehicle's fuse removal tool and some spare fuses, are located in the luggage compartment lower fuse box.

## ENGINE COMPARTMENT FUSE BOX

### Engine compartment front fuse box

Fuse No	Rating (Amps)	Fuse Colour	Circuit
1	5	Tan	Left-side headlamp motor.
2	5	Tan	Headlamps.
3	5	Tan	Right-side headlamp motor.
4	-	-	-
5	-	-	-
6	30	Green	Headlamp power wash.
7	-	-	-
8	-	-	-
9	-	-	-
10	15	Blue	Intercooler water pump.

## Engine compartment rear fuse box

Fuse No	Rating (Amps)	Fuse Colour	Circuit
11	15	Blue	Engine management system (2.0L diesel. 3.0L petrol. 3.0L diesel).
12	15	Blue	Engine management system (2.0L diesel. 3.0L petrol. 3.0L diesel).
13	10	Red	Gear selector. Fuel system. Engine management system (2.0L petrol. 2.0L diesel. 3.0L petrol).
	15	Blue	Gear selector. Fuel system. Engine management system (3.0L diesel).
14	15	Blue	Engine management system (2.0L diesel. 3.0L diesel).
	10	Red	Engine management system (2.0L petrol).
15	10	Red	Engine cooling. Engine mounts. Engine management system (2.0L petrol. 2.0L diesel. 3.0L petrol).
	15	Blue	Engine cooling. Engine mounts. Engine management system (3.0L diesel).
16	25	Clear	Engine management system (2.0L petrol. 3.0L petrol).
17	20	Yellow	Exhaust sensors.
18	20	Yellow	Exhaust sensors (2.0L diesel. 3.0L petrol. 3.0L diesel).
19	20	Yellow	Exhaust sensors (3.0L petrol).
20	-	-	-
21	-	-	-
22	5	Tan	Intercooler water pump (2.0L diesel. 3.0L petrol. 3.0L diesel).
23	5	Tan	Engine management system. Starter monitor. Electrical power management.
24	15	Blue	Gearbox (manual transmission).
25	30	Green	Starter Motor.
26	-	-	-
27	25	Clear	Transfer Case.
28	-	-	-