

Vehicle cleaning

THE EXTERIOR

- ⚠ To prevent damage to your vehicle when using a valeting service, make sure to advise them of the cleaning instructions contained within the Owner's handbook.
- ⚠ Never use cleaning products which are not approved for use on vehicles.
- ⚠ To avoid damage to the bonnet, do not lift the wipers when they are in the normal parked position. See **209, WIPERS SERVICE POSITION.**
- ⚠ Following cleaning of the vehicle's exterior (particularly with a pressure washer), it is recommended that the vehicle is taken for a short drive, in order to dry out the brakes.
- ⚠ Some high pressure cleaning systems are sufficiently powerful enough to penetrate door and window seals, and damage trim and door locks. Never aim the water jet directly at the engine air intake, heater air intakes, radiator cooling fins, body seals, cameras, or at any components which may be damaged.

Do not aim the water jet directly at any rubber gaiters or seals on suspension joints.

Make sure that the water jet nozzle is more than 300 mm away from vehicle components.

SENSORS AND CAMERAS

- ⚠ When washing the vehicle, do not aim high pressure water jets directly at any of the sensors and cameras. Do not use abrasive materials or hard/sharp objects to clean the sensors and cameras. Only use approved vehicle shampoo.

Park assist and Parking aid sensors should be kept clean to maintain accuracy and performance.

If required, the cameras should be cleaned using a cloth moistened with a small amount of glass-cleaning product.

PAINTWORK

- ⚠ Substances which are corrosive, such as bird droppings, can damage the vehicle's paintwork and should be removed as soon as possible.

USING AN AUTOMATIC WASH

- ⚠ Commercially operated automatic car washes, jet washes, and power-operated mops, are not recommended.

ENGINE COMPARTMENT

- ⚠ Do not use a high pressure washer or steam cleaner in the engine compartment.
- ⚠ Make sure that the brake fluid reservoir is kept dry at all times. Only use a clean, dry cloth to clean the brake fluid cap and reservoir.

ALLOY WHEELS

- ⚠ Only use approved wheel cleaning products.

GLASS SURFACES

Clean the rear window with a soft cloth to avoid damaging the heating element. Do not scrape the glass or use any abrasive cleaning fluid.

Mirror glass is particularly susceptible to damage. Wash with soapy water. Do not use abrasive cleaning compounds or metal scrapers to remove ice.

To avoid damaging the protective coating, only clean the interior side of the sunroof glass with a soft cloth. Do not scrape the glass or use abrasive cleaning fluids.