

# Intelligent stop/start

If the Intelligent stop/start button is pressed while there is a fault with the system, the message **Auto stop/start Not Available** is momentarily displayed in the Message centre.

**Note:** *If the Intelligent stop/start button is pressed while an automatic engine stop is in progress, the engine will restart.*

**Note:** *The Intelligent stop/start system will automatically reactivate the next time the vehicle's ignition is switched on.*

## DRIVER EXIT

**Note:** *The Driver exit feature is only available when Intelligent stop/start is enabled.*

To prevent the vehicle from being inadvertently left in a driveable condition, the vehicle will detect when a driver is not present, and automatically switch off the ignition system.

If Drive (**D**), Sport (**S**) or Neutral (**N**) is selected, the Driver exit feature will switch the vehicle's ignition off if the following conditions exist:

- All vehicles: The driver's seat belt is unbuckled, and:
- Automatic transmission only: The brake pedal is released.
- Manual transmission only: The driver's door is opened.

If Park (**P**) is selected, the Driver exit feature will switch the vehicle's ignition off, if the driver's seat belt is unbuckled.

Once the vehicle's ignition has been switched off, the vehicle can be locked, if required. See **14, LOCK CONFIRMATION.**