


TOUCH SCREEN CONTROLS

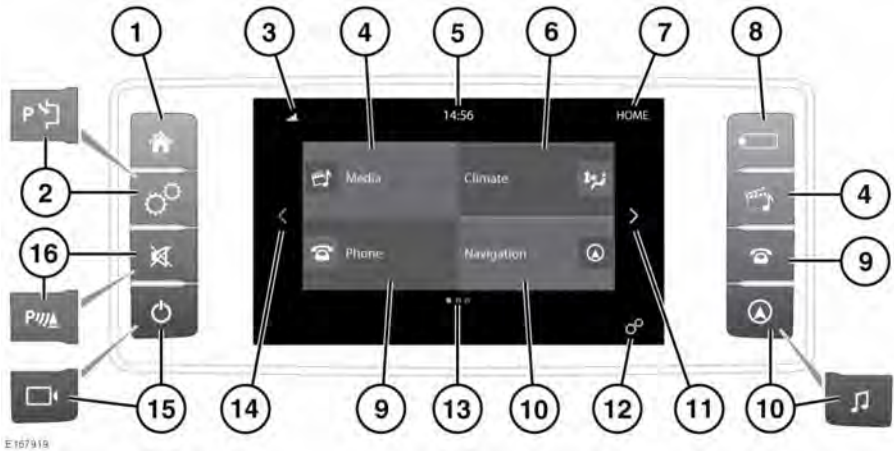

⚠ Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.

ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.

ⓘ Avoid spilling or splashing liquids onto the Touch screen.

Note: The Touch screen display and the number of screen pages will vary, depending on the specification of the vehicle.

Note: The Touch screen will remain active until the ignition is switched off and the driver's door is opened.

1. Press to select the **HOME** screen.
2. Press to select the **GENERAL SETTINGS** menu, see **76, GENERAL SETTINGS**. If Park assist is fitted, then see **123, PARK ASSIST**.

3. Status icons: When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed. See **152, MEDIA SETTINGS**.

4. Touch the screen or press the button, to select the Media system; or if the Media system is already switched on, touch to select the current media source.

Note: When the system is active, current information for the media being played will be displayed.

5. Clock: The clock can be adjusted via the **System** option, in the **GENERAL SETTINGS** menu.
6. Touch to select the **FRONT CLIMATE** system. See **78, CLIMATE CONTROL**.
7. Screen title.
8. Touch to select the media **SOURCE** list.
9. Touch the screen or press the button, to select the **PHONE** screen. See **166, TELEPHONE SYSTEM OVERVIEW**.