

# Entering the vehicle

- The approach illumination pre-set delay period, is 30 seconds. This delay period can be configured to provide illumination lasting between 0 and 240 seconds. See **47, INSTRUMENT PANEL MENU**.
  - 6. Emergency key access: Slide open the side cover to release, then remove.
  - 7. Remove the emergency key blade and unfold.
  - 8. If the Smart key fails to open the vehicle, insert the key blade into the slot at the base of the driver's door lock cover. Apply slight downward pressure to the top of the cover and gently lever the key blade upwards. Carefully rotate the door lock cover upwards, to lever the cover off the retaining lugs.
  - 9. Insert the key blade into the exposed lock and turn to operate the lock. The alarm sounds until the Smart key is positioned correctly, to disarm the alarm: see **103, KEYLESS START BACKUP**.
- Note:** When replacing the door lock cover, locate the top retaining lugs first. Press down and inwards to locate the single bottom lug. The lug clicks into the locked position. Check the security of the cover. An insecure cover is likely to fall off while the vehicle is moving.
- 10. Keyless entry/exit: Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

**Note:** A replacement Smart key can be obtained only from a Retailer/Authorised Repairer. The Retailer/Authorised Repairer will require proof of identification and ownership. Notify your Retailer/Authorised Repairer immediately if a Smart key is lost or stolen.

## SINGLE/MULTI-POINT ENTRY

Press the unlock button; the vehicle unlocks in one of two ways:

1. Single-point entry: On the first press, the driver's door unlocks. If a locking fuel filler flap is fitted, it also unlocks. A second press is required to unlock the remaining doors and luggage area.
2. Multi-point entry: On the first press, all of the doors, the fuel filler flap and the luggage area unlock.

To change from Single to Multi-point entry (or vice versa), press both the lock and unlock buttons simultaneously for three seconds. The hazard warning lamps flash twice to confirm the change.

This feature may also be set via **Vehicle Settings** in the Instrument panel menu. See **47, INSTRUMENT PANEL MENU**.

**Note:** If, when the vehicle is unlocked, an audible warning is emitted, this will be a 'Mislock' error. There may be a fault with either of the alarm sensors. Consult a Retailer/Authorised Repairer as soon as possible.

## GLOBAL OPENING

Press and hold the Smart key unlock button for three seconds to unlock the vehicle and open all of the windows.

To cancel Global opening, press any of the buttons on the Smart key or operate the driver's window switches. To stop a particular window opening, operate the relevant window switch.

**Note:** Global opening can be enabled and disabled via **Vehicle Settings** in the Instrument panel menu. See **47, INSTRUMENT PANEL MENU**.