

# Maintenance

1. Make sure the ignition is switched off.
2. Switch the ignition on and then off again.
3. Immediately press the wiper/washer control to its lowest position (as if to command a single wipe, see **62, WIPER OPERATION**), hold this position while switching on the ignition again.  
The wipers will move to their service position.
4. When the new parts have been fitted, switch the ignition off. This will return the wipers to the park position.

**Note:** Fit only replacement wiper blades that are identical to the original specification.

**Note:** Replace the wiper blades in accordance with manufacturer's instructions.

## SUNROOF RESET

Make sure that the conditions, listed below, are met before carrying out the sunroof reset procedure:

- The ambient air temperature needs to be within the range of 5°C to 65°C.
- The vehicle has to be stationary.
- The vehicle's battery is sufficiently charged and the electrical connections are good.

Reset the sunroof as follows:

1. Switch the ignition on.
2. Manually fully close the sunroof and the sunblind. Release the switches. See **72, ELECTRIC WINDOWS**.



**Before closing the sunroof, make sure that no occupants have any part of their body in a position where it could be trapped. Even with an Anti-trap system, death or serious injury could occur. See 74, SUNROOF ANTI-TRAP MECHANISM.**

3. Fully press and hold the front of the sunroof switch for 10 seconds, to start the reset cycle. Continue to hold the front of the sunroof switch.

**Note:** If the switch is released, then the whole procedure will have to be repeated.

4. The reset cycle will:
  - Fully open the sunblind.
  - Fully open and then fully close the sunroof.
  - Fully close the sunblind.



**The Anti-trap system is disabled during the reset cycle. Make sure that no occupants have any part of their body in a position where it could be trapped.**

5. Once the reset cycle has completed and the sunblind has stopped moving, release the switch.

The sunroof and the sunblind can now be operated as normal.

## WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged, or the power supply is interrupted.

Once the power supply is restored, reset the windows as follows:

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for 2 seconds.
3. Release the switch.
4. Repeat the lift and release procedure twice more.
5. Test the window for correct manual and automatic switch operation. See **72, ELECTRIC WINDOWS**.
6. Repeat the procedure on each window.