

## Cooled ventilation

- Touch the down arrow icon to switch cooled ventilation on at the maximum setting (3 blue bars).
- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow a third time to switch off cooled seat ventilation.


## Seat zone selection


If fitted with Climate seats, constant selection of the **Seat zone** soft key will scroll through the 3 choices of seat zone; full seat, cushion, or back rest only.

## AUXILIARY HEATER

The vehicle may be fitted with an Auxiliary heater, which is powered by fuel drawn from the vehicle's tank. The Auxiliary heater operates at low ambient temperatures and helps to boost the temperature of the engine's coolant for improved heater performance. It can also be controlled by the Timed climate control system or from the Timed climate remote control (if fitted).

When the Auxiliary heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and is not a cause for concern.

 **Do not operate the Auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust, causing a fire/explosion.**

 **Do not operate the Auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes, which may cause unconsciousness or death.**

## TIMED CLIMATE

The Timed climate system, when in operation, provides a comfortable temperature inside the cabin in advance of using the vehicle, or maintains a temperature when leaving the vehicle for a short period of time.

The Timed climate system has control options for either timed or manual setting via the Touch screen, or it can be operated remotely by using the Timed climate remote.

Dependent on the external ambient temperature, the Timed climate system will automatically choose to draw in fresh air to cool the cabin, or to operate the Auxiliary heater to warm it.

Also, in low ambient temperatures, the Auxiliary heater helps to boost the temperature of the engine's coolant for improved heater and starting performance.

***Note:** When the heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and is not a cause for concern.*



**Do not operate the Timed climate system when refuelling the vehicle. Doing so may cause fuel vapours to combust, causing a fire/explosion.**



**Do not operate the Timed climate system while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes, which may cause unconsciousness or death.**

Timed climate may not operate, or will switch off automatically, in the following scenarios:

- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at, or above, its required temperature.