


## CONFIGURABLE DYNAMICS

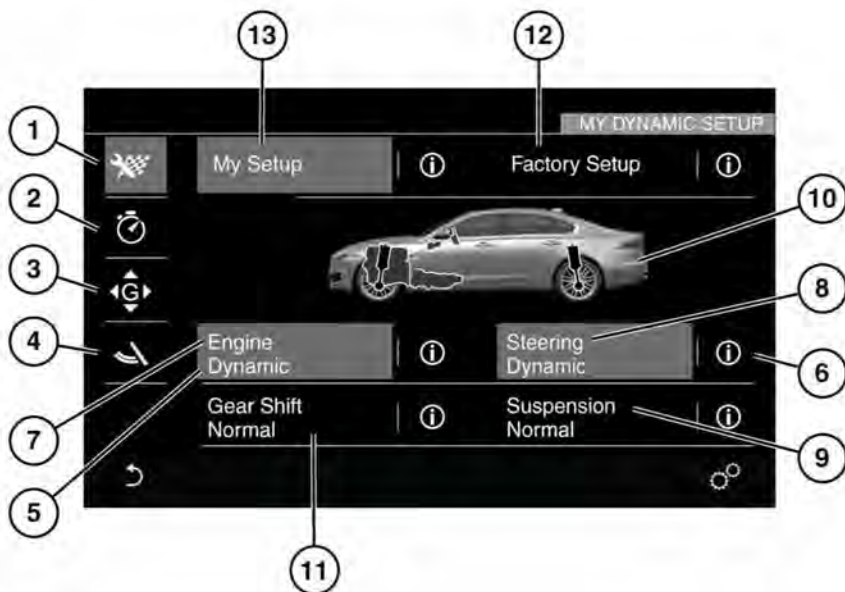

Vehicles with configurable dynamics, will allow the Dynamic driving mode settings to be configured via the Touch screen for selected characteristics, with a choice between Normal and Dynamic settings. Select extra features from the home menu screen. See **75, TOUCH SCREEN CONTROLS**.

1. Touch to display and adjust configurable settings when in Dynamic mode.
2. **Stopwatch:** Touch to display live timings and split timings.

**Note:** Up to 99 split times can be saved and reviewed.

**Note:** When the **Press to split** soft key has been selected, it is disabled for 3 seconds while the split time is displayed.

3. **G Meter:** Touch to display the current amount and direction of G Force.

4. **Pedal Graph:** Touch to display a brake and accelerator graph, or a live display.
5. Indicates status: **Dynamic** or **Normal**.
6. Touch to display a description of the function.
7. **Engine:** Touch to select the **Dynamic** or **Normal** setting.
8. **Steering:** Touch to select the **Dynamic** or **Normal** setting.
9. **Suspension:** Touch to select the **Dynamic** or **Normal** setting.
10. Displays which dynamic functions are selected.
11. **Gear Shift:** Touch to select the **Dynamic** or **Normal** setting.
12. **Factory Setup:** Touch to switch on/off.

13. **My Setup:** Touch to switch the user settings on/off.