


Steering wheel

ADJUSTING THE STEERING WHEEL

 **Never adjust the steering wheel while the vehicle is moving.**

 Do not use steering wheel mounted security devices on vehicles with electrically operated steering columns. Movement of the steering column in Exit and entry mode, could result in damage to the vehicle or possible injury to the occupant.

Electric steering column

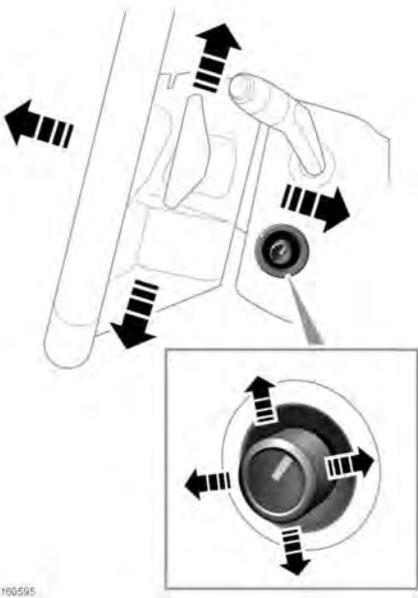

Vehicles with an electric steering column, can be adjusted to alter the tilt and reach of the steering wheel:

- **Note:** The electrically operated steering column will continue to move until the control is released or until the steering column reaches either of its minimum or maximum positions.

Move the control forwards or rearwards to adjust the reach of the steering wheel.

- Move the switch up or down to adjust the tilt of the steering wheel.

Up to 3 steering wheel positions can be stored and recalled, along with the seat and exterior mirror positions, by the driving position memory. See **22, DRIVING POSITION MEMORY.**

Manual steering column



E166622

Vehicles with a manual steering column, can be adjusted to alter the tilt and reach of the steering wheel:

- To unlock the steering column, rotate the control counter-clockwise until the endstop is reached.
- Manually adjust the steering column to the desired reach/tilt position of the steering wheel.
- To lock the steering column, rotate the control clockwise until the endstop is reached.

Note: An audible click will confirm locking of the steering column.