

## SPEED LIMITER OVERVIEW

**⚠** The speed limiters are driving aids only. It remains the driver's responsibility to drive with due care and attention, in a manner which is safe for the vehicle, its occupants and the other road users.



To switch between the Speed limiter systems and the Cruise control systems, press the **LIM** button on the steering wheel. These systems cannot be used simultaneously.

**ⓘ** When the vehicle's ignition is switched on, the previous state, either Cruise control or a Speed limiter, will automatically be selected.

There are two types of Speed limiter; Automatic Speed Limiter (ASL) and Intelligent Speed Limiter (ISL).

When in Speed limiter mode, to select either system, press and hold the **CAN** button on the steering wheel. The ASL indicator lamp will illuminate when ASL is selected, see **52, AUTOMATIC SPEED LIMITER (AMBER)**. The ISL warning lamp will illuminate when ISL is selected, see **53, INTELLIGENT SPEED LIMITER (ISL) (AMBER)**.

Either system can also be selected via the Instrument panel menu (see **47, INSTRUMENT PANEL MENU**).

**Note:** *Dependant on the vehicle's specification, the speed limiter set-point will be displayed as a marker on the speedometer or a numeric display in the Message centre. The limiter set-point can also be displayed in the Head-up display, if enabled. See **50, HEAD UP DISPLAY**.*


When active, ASL allows a speed to be set that the driver does not wish to exceed.

When active, ISL restricts the vehicle's maximum speed to the currently applicable road speed limit. The speed limit information is provided by the Navigation system and Traffic sign recognition.

## AUTOMATIC SPEED LIMITER (ASL) CONTROLS

**⚠** In certain conditions, such as a steep downhill gradient, the vehicle's speed may exceed the set-speed limit. This is because engine braking is unable to maintain or reduce the vehicle's speed.

**Note:** *Automatic Speed Limiter (ASL) only operates at speeds between 30 km/h (19 mph) and the vehicle's maximum speed. The speed limit can be set while the vehicle is moving or stationary.*

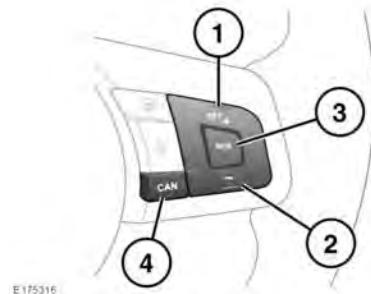

- 1. SET+:** Press to set or increase the speed limit. The set-speed limit will be displayed in the Message centre.